

The Flying Culinary Circus

FCCBBQ



PROFESSIONAL 4.E

INSTRUCTION MANUAL AND MAINTENANCE FCC-G-18120-41



OUTDOOR USE ONLY
READ THE OPERATING INSTRUCTIONS
BEFORE USING THE APPLIANCE.

Share the fun of cooking!

Contents

Warnings	3
Technical Data Professional 4.1	4
Gas category	4
Exploded Drawing	5
Parts list	6
Hardware	7
Assembly instructions	8
Gas leak test	20
Last check	21
Lighting instructions	22
Warnings	23
Maintenance	24
Grease fire	25
Singapore Chili Crab	26
Troubleshooting	27
Consumer Contact	28



WARNINGS

- FAILURE TO FOLLOW THE INSTRUCTIONS PROVIDED CAN IMPLY A RISK OF SERIOUS INJURY TO PERSONNEL AND FIXED INSTALLATIONS.
- THE BBQ IS INTENDED FOR OUTDOOR USE ONLY IN WELL-VENTILATED AREAS. NEVER BBQ IN ENCLOSED SPACES OR UNDER A ROOF, DUE TO THE DANGER OF THE LACK OF OXYGEN.
- ACCESSIBLE PARTS OF THE BBQ BECOME VERY HOT DURING USE. KEEP CHILDREN AND OTHERS WHO NEED SUPERVISION AT A SAFE DISTANCE.
- NEVER MOVE THE BBQ WHILE IN USE OR CONNECTED TO THE GAS BOTTLE.
- SHUT OFF THE GAS ON THE REGULATOR AFTER USE AND DISCONNECT FROM THE GAS BOTTLE.
- MODIFICATION OF THE BBQ CAN CAUSE DANGER AND WILL INVALIDATE THE WARRANTY.
- DO NOT PLACE THE BBQ COVER OR OTHER FLAMMABLE MATERIAL IN THE COMPARTMENT UNDER THE BBQ WHEN IT IS IN USE OR HOT.
- CLEAN THE BBQ REGULARLY AND THOROUGHLY.

Technical Data

W: 140 cm



H: 120 cm

Total Heat input: 15,9 kW
Gas consumption: 1157 gram/time
Gasbottle (not included): Use standard bottle approved for use in the Nordic Region. Even though butane and propane gas can be used, we recommend propane for use in the Nordic Region. Approved hoses and regulators are available from most outlets selling gas equipment.

NB! Gas hoses used for this product must not exceed 120 cm in length.

ONLY THE GAS TYPE AND GAS CATEGORY LISTED IN THE RATING LABEL COULD BE USED ON YOUR APPLIANCE.

DESTINATION OF COUNTRIES TO USE	VALVE SIZE	GAS TYPE	GAS CATEGORY
LU,NL,DK,FI,SE,CY,CZ,E-E,LT, LV,MT,SK,SI, BG,IS,NO,TR, HR,RO,IT,HU	0.89 mm Main Burner 0.84 mm Side Burner	G30 (butan), G31(propan) and their mixtures, LPG 28-30 mbar	I3B/P(30)

THE FOLLOWING GAS TYPES CAN BE USED


- I3B/P(30): G30(Butan), G31(propan) og blandinger av disse, LPG 28-30 mbar



0359 BR 665

This product is produced according to EUROPEAN GAS APPLIANCE STANDARD EN498 and EN484 and is CE certified

Exploded Drawing

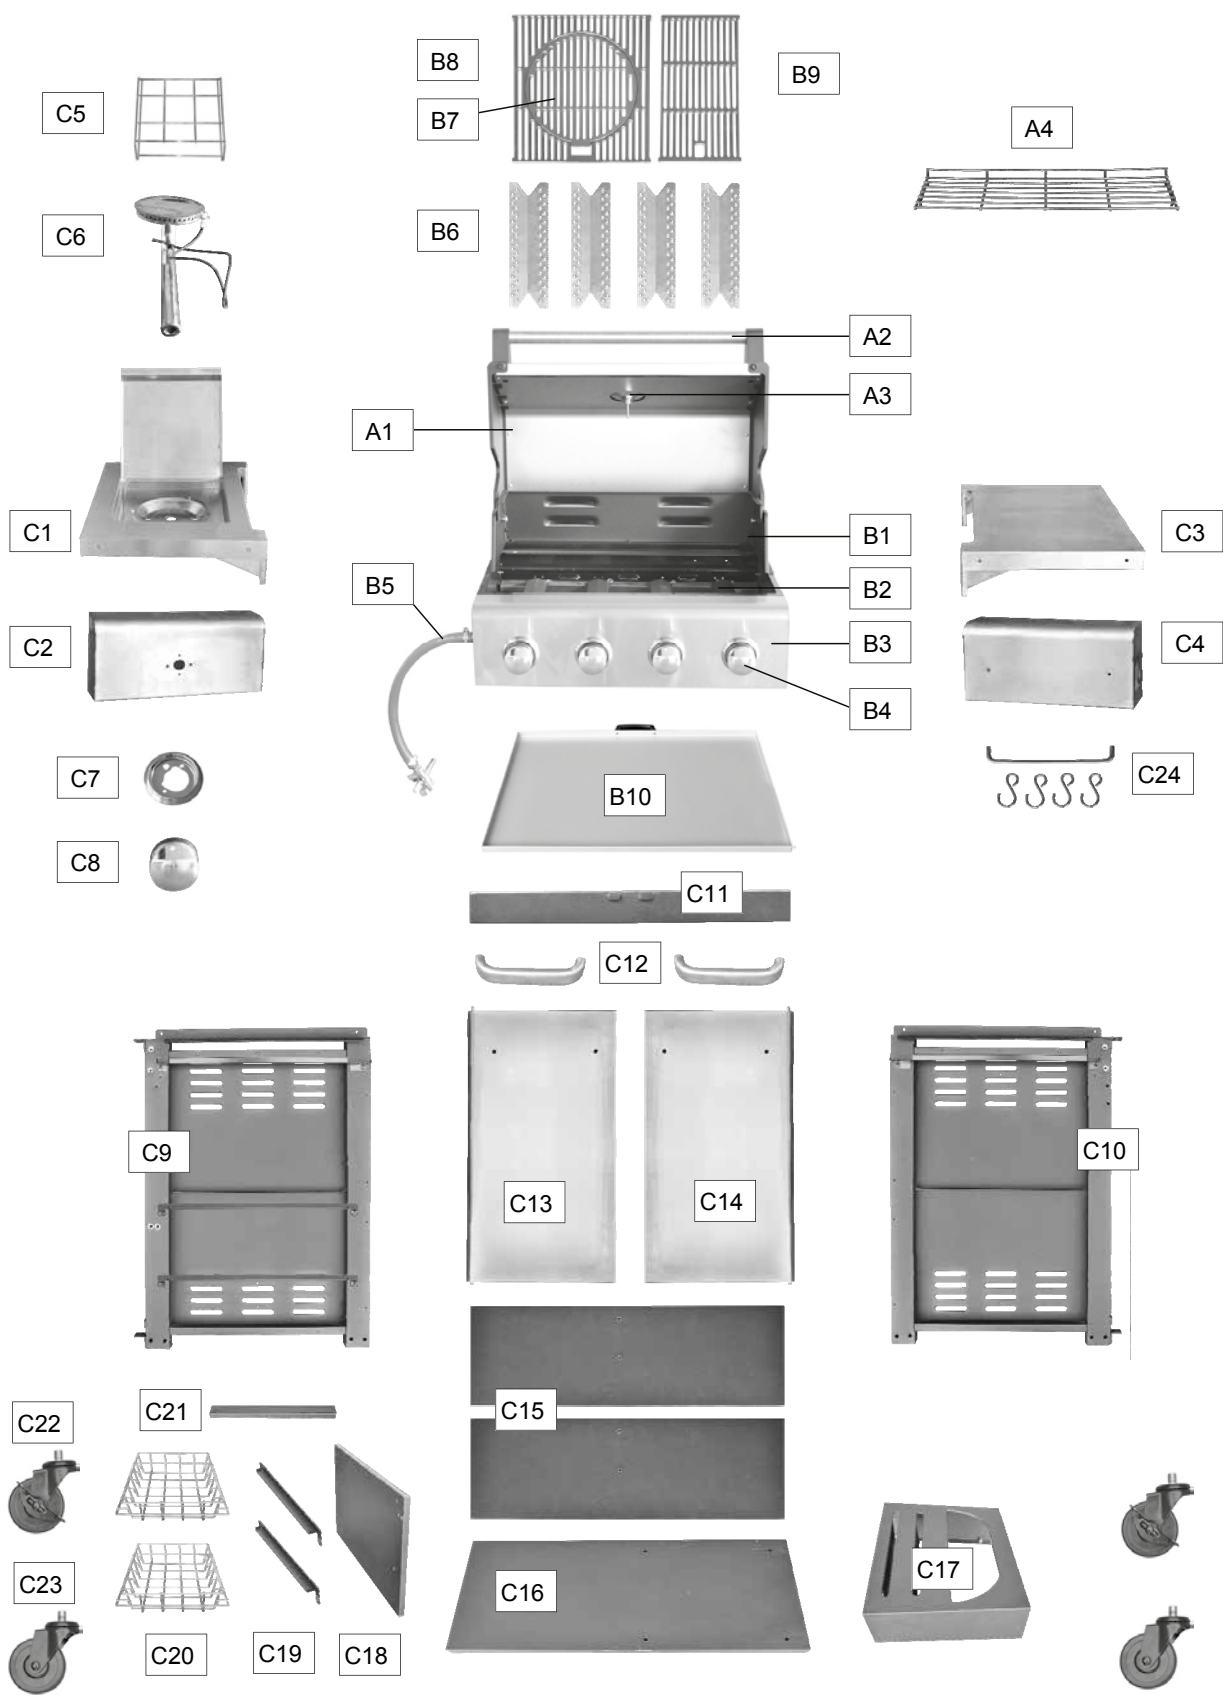


Parts List

CODE	DESCRIPTION	QTY
A1	HOOD (Pre-Assembled to Body)	1
A2	HOOD HANDLE	1
A3	HEAT INDICATOR	1
A4	WARMING RACK	1
B1	BARBECUE BODY	1
B2	BURNER	4
B3	CONTROL PANEL	1
B4	KNOB	4
B5	HOSE AND SIDE VALVE ASSEMBLY	1
B6	FLAME TAMER	4
B7	ROUND GRILL	1
B8	LEFT COOKING GRILL	1
B9	RIGHT COOKING GRILL	1
B10	DRIP TRAY	1
C1	SIDE BURNER SHELF	1
C2	SIDE BURNER SHELF PANEL	1
C3	SIDE SHELF	1
C4	SIDE SHELF PANEL	1
C5	SIDE BRURNER GRID	1
C6	SIDE BURNER	1
C7	KNOB BEZEL	1
C8	SIDE BURNER KNOB	1
C9	LEFT CABINET PANEL ASSEMLBY	1
C10	RIGHT CABINET PANEL ASSEMLBY	1
C11	UPPER SUPPORT	1
C12	DOOR HANDLE	2
C13	LEFT DOOR	1
C14	RIGHT DOOR	1
C15	REAR PANEL	1
C16	BOTTOM PANEL	1
C17	STORAGE UNIT	1
C18	MIDDLE PANEL	1
C19	FOOD BASKET BRACKET	2
C20	FOOD BASKET	2
C21	FOOD BASKET FRONT BRACKET	1
C22	LOCKABLE CASTER	2
C23	CASTER	2
C24	TOOL HOOK	1

Hardware


HARDWARE

CODE	DESCRIPTION	QTY	CODE	DESCRIPTION	QTY
D1	M6x35 bolt	8	D4	M5x10 bolt	2
D2	M6x15 bolt	37	D5	ST4.0x10 screw	20
D3	M4x10 bolt	3	D6	M6 nut	12

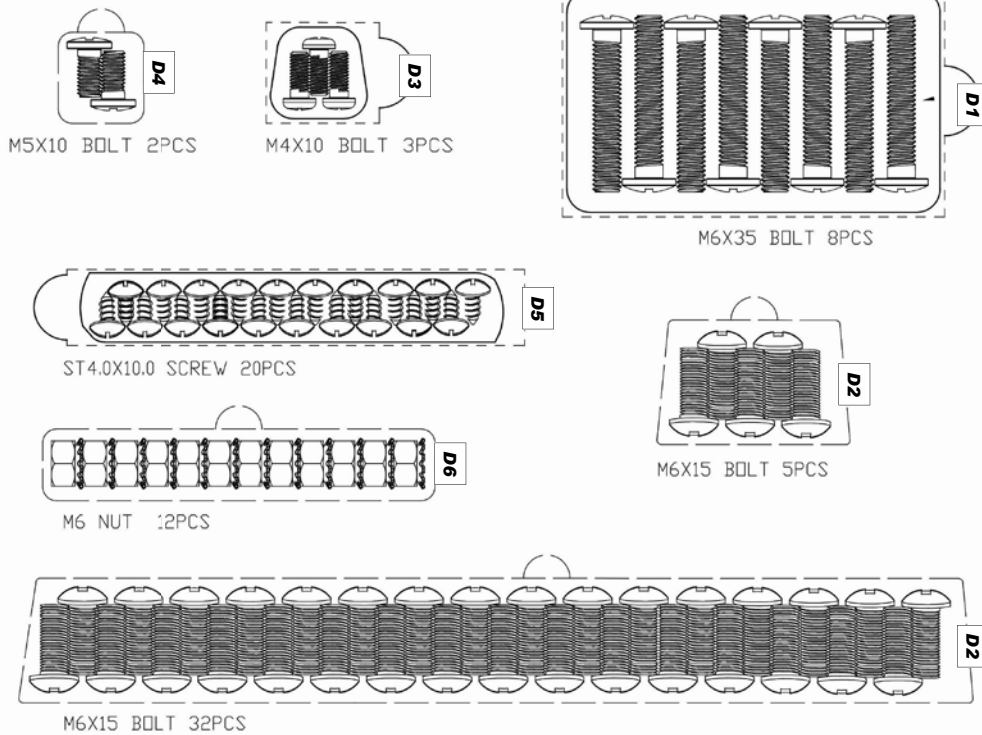

WARNING! EXERCISE CAUTION WHEN USING ELECTRIC TOOLS - THEIR STRENGTH CAN DAMAGE THE SCREWS.


**Please follow these instructions step by step.
A screwdriver and adjustable/allen wrench (not provided)
is necessary when assembling the BBQ.**

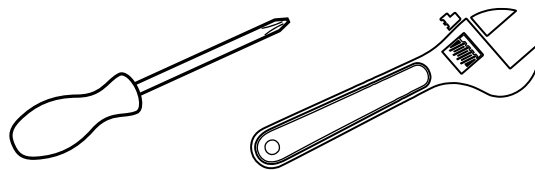

The BBQ should be assembled by two persons.


Assembly

1

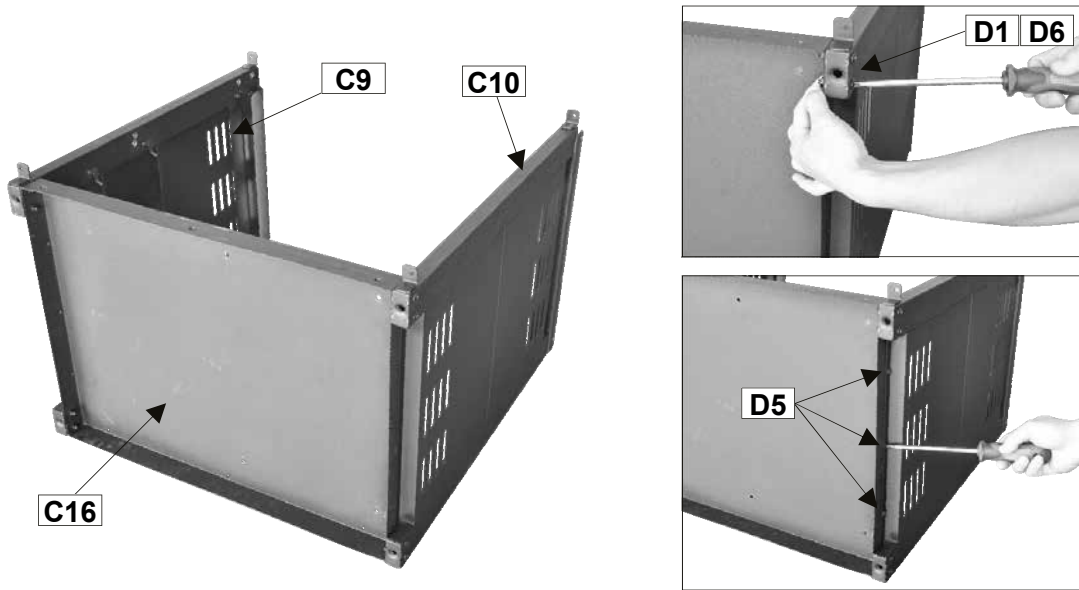

1. Attach the Left Cabinet Panel Assembly (C9) and Right Cabinet Panel Assembly (C10) to the Bottom Panel (C16) using M6x35 Bolts (D1x8pcs) and M6 Nuts (D6x8pcs), ST4.0x10 Screw (D5x6pcs) as shown.



2

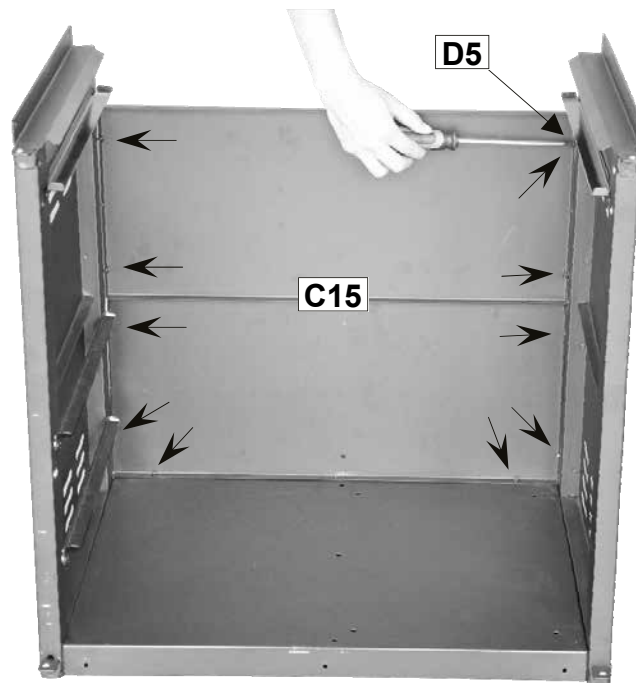

2. Attach the Rear Panel (C15x2pcs) to the cabinet assembly using ST4.0x10 Screws (D5x10pcs) as shown.



Assembly

3

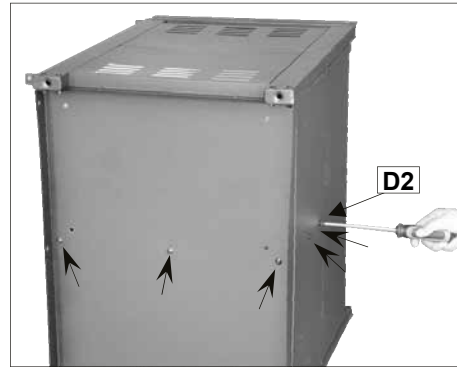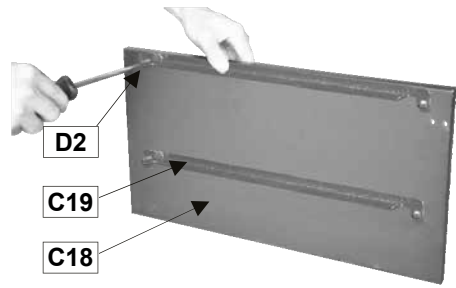

3. Attach the Food Basket Bracket (C19x2pcs) onto the Middle Panel (C18) using M6x15 Bolts (D2x4pcs), Then attach the middle panel assembly to the cabinet assembly using M6x15 Bolts (D2x5pcs) as shown.


4

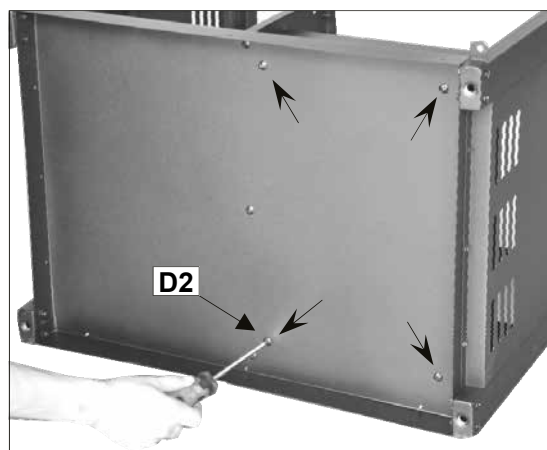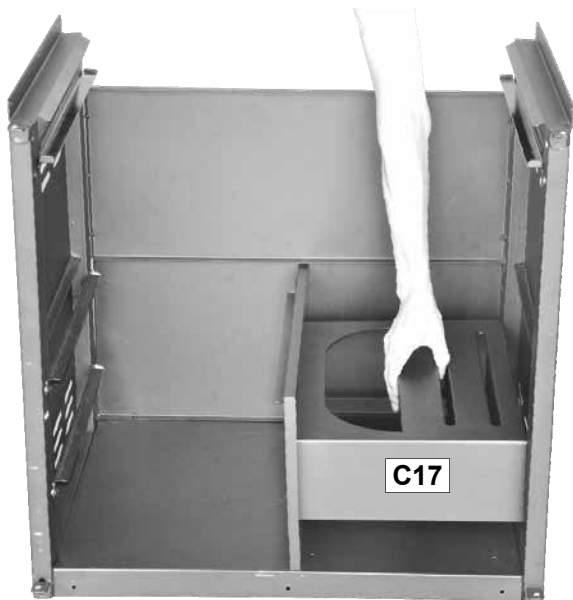

4. Attach the Storage Unit (C17) onto the Bottom Panel (C16) using M6x15 Bolts (D2x4pcs) as shown.

Assembly

5

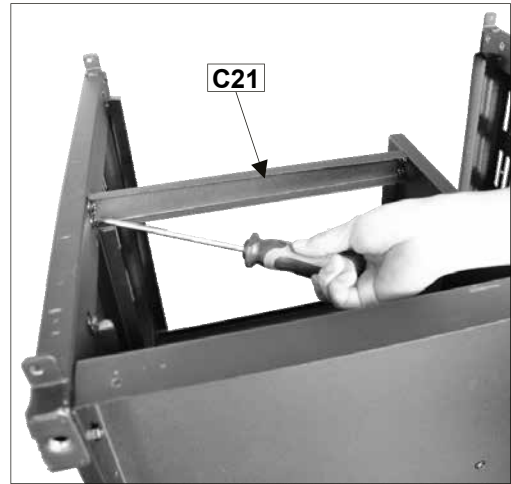


5. Attach the Food Basket Front Bracket (C21) to the Left Cabinet Panel Assembly (C9) and Middle Panel (C18) using M6x15 Bolts (D2x4pcs).

6



6. Attach the Upper Support (C11) to the left/right cabinet panel assembly using M6x15 Bolts (D2x4pcs).the left/right cabinet panel assembly.

7

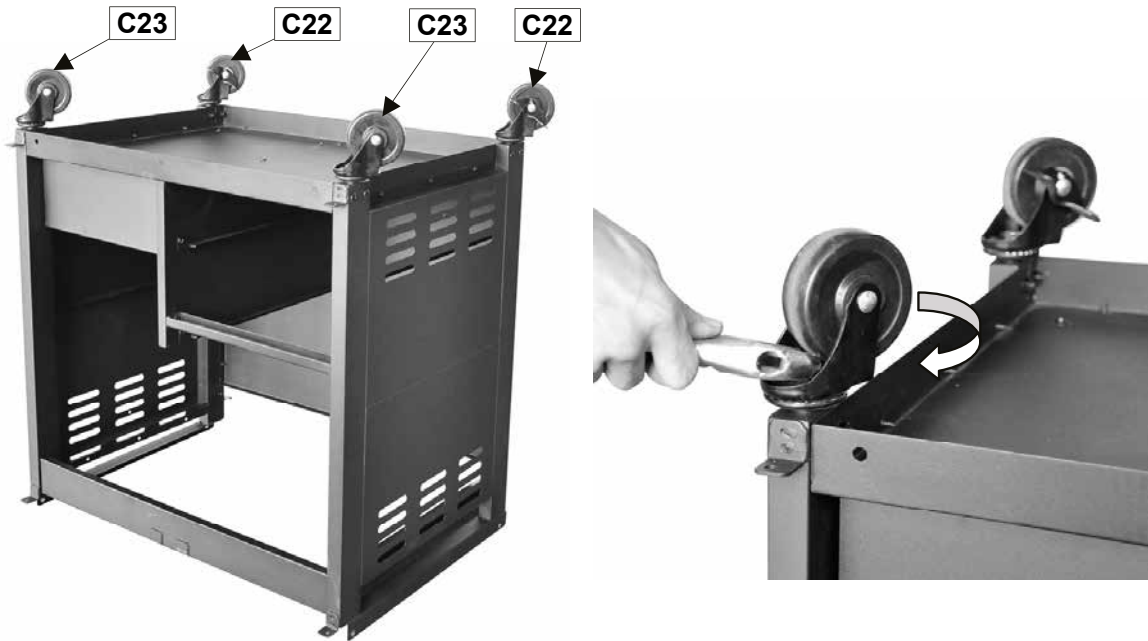

7. Carefully turn the cabinet upside-down. Attach the Lockable Casters (C22x2pcs) into the rear side holes of the left/right cabinet panel assembly and the Casters (C23x2pcs) into the front side holes of the left/right cabinet panel assembly.

8



8. Remove the retaining bolts from one Door Handle (C12), then attach the door handle onto the Left Door (C13) using the retaining bolts as shown. Repeat above process for Right Door (C14).

9



9. Fit the doors to the cabinet by depressing the spring pins and placing into the cabinet.

10




NB!

TWO PERSONS IS
RECOMMENDED
WHEN LIFTING
THE STOVE BODY






10. Carefully place the Barbecue Body (B1) onto the cabinet assembly and fix using M6x15 Bolts (D2x4pcs) as shown.

11

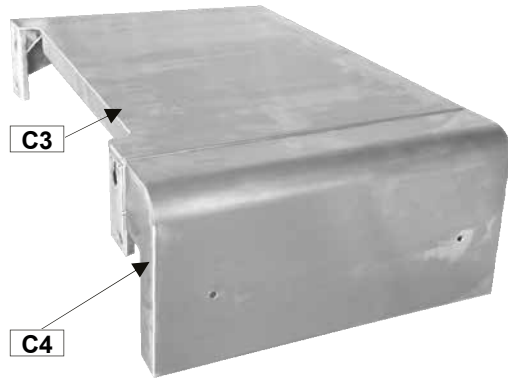


11. Attach Side Shelf Panel (C4) onto Side Shelf (C3) using M6x15 Bolts (D2x2pcs) and M6 Nut (D6x2pcs) as shown.

12

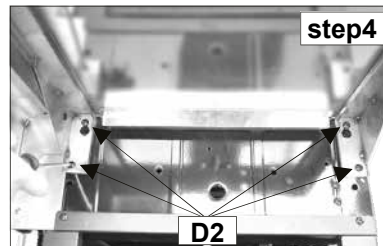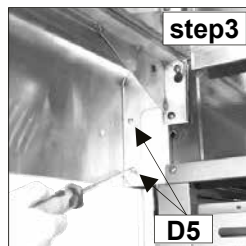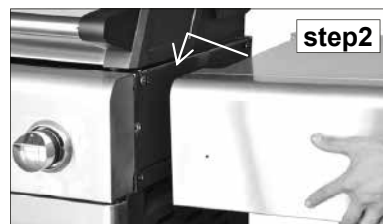




12. Attach the side shelf assembly to the barbecue body using ST4.0x10 Screw (D5x2pcs) and M6x15 Bolts (D2x4pcs) as shown.

13

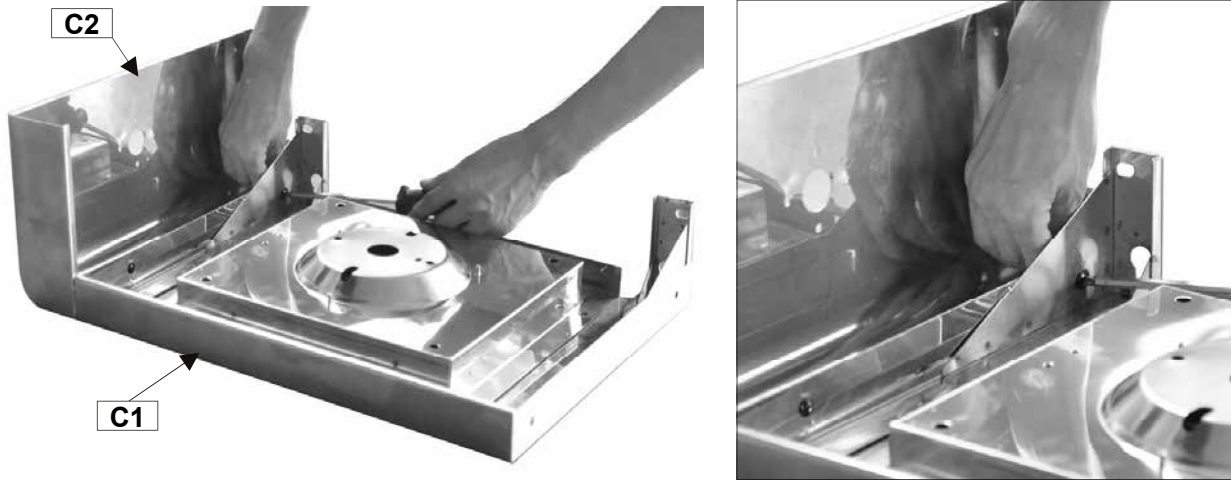


13. Attach Side Burner Shelf Panel (C2) onto Side Burner Shelf (C1) using M6x15 Bolts (D2x2pcs) and M6 Nut (D6x2pcs) as shown.

14

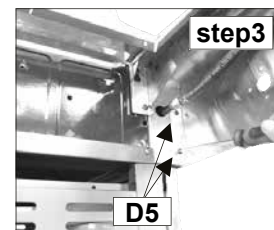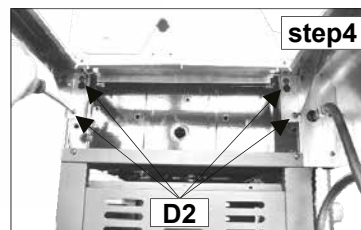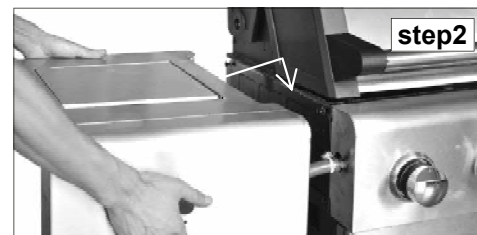


14. Attach the side burner shelf assembly to the barbecue body using ST4.0x10 Screw (D5x2pcs) and M6x15 Bolts (D2x4pcs) as shown.

15

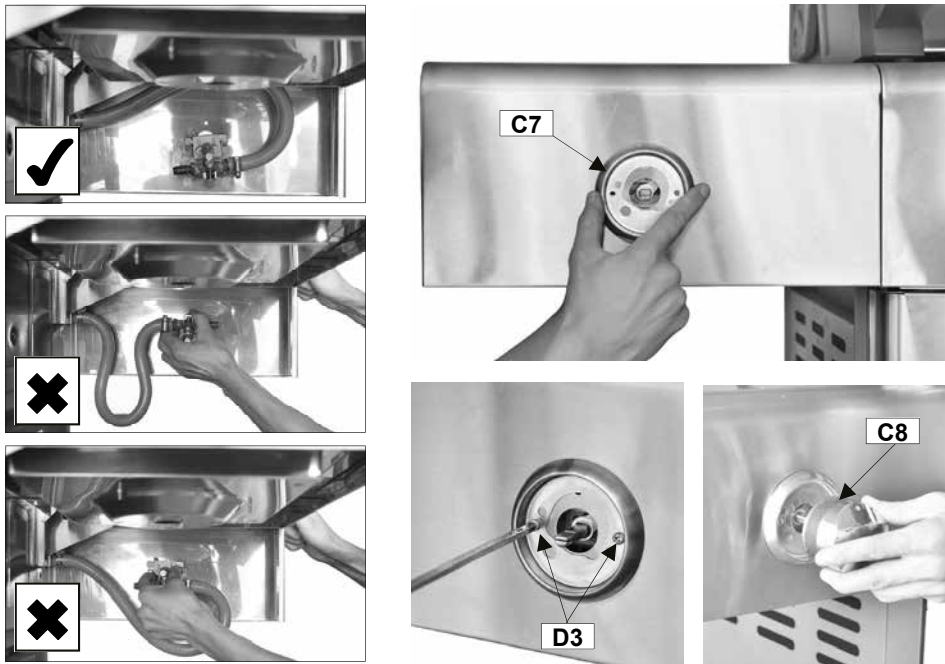

15. Attach the side burner valve and Knob Bezel (C7) onto side burner shelf using M4x10 Bolts (D3x2pcs) as shown. Press the Side Burner Knob (C8) onto side burner valve stem.

16

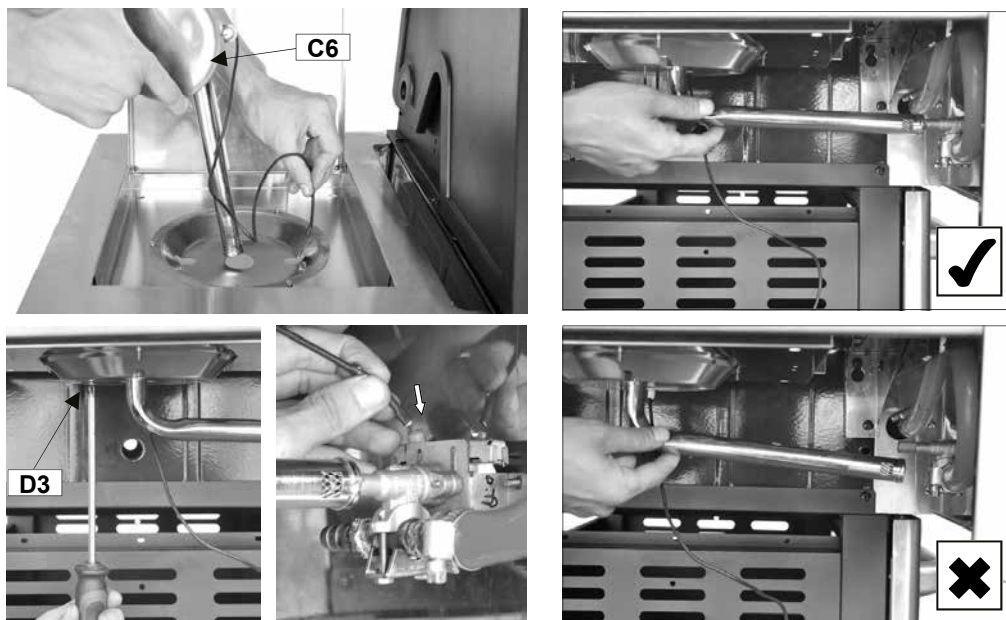

16. Feed the venturi tube of the Side Burner (C6) through the hole in bottom of the side burner shelf, and fix side it onto side burner shelf using a M4x10 Bolt (D3) as shown.

Connect the electrode wire to the ignitor.

Make sure that the end of tube is set over the gas outlet of side burner valve.

Warning: before operation, ensure side burner wires are connected to ignitor. if the circuit is not completed, the ignitor will not spark!

17



17. Place the Side Burner Grid (C5) onto the side burner shelf.




NOTE: Make sure the base of cooking utensil to put on the side burner is larger than 150mm and smaller than 240mm.

18




18. Insert the Drip Tray (B10) by sliding it underneath the barbecue body.

19

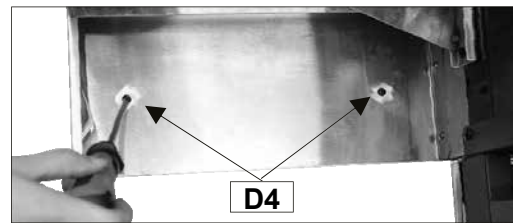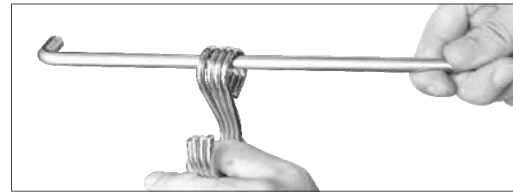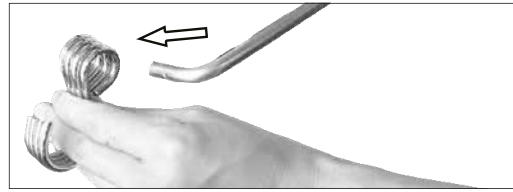

19. Attach the Tool Hook (C24) onto the Side Shelf Panel (C4) using M5x10 Bolts (D4x2pcs) as shown.

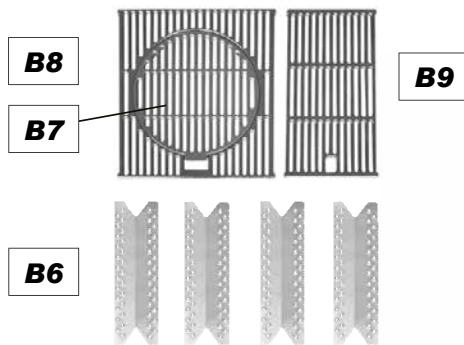

20



20. Lay the Flame Tamer (B6) carefully into the body ensuring it lies level within the body. Lay the Left Cooking Grill (B8) and Right Cooking Grill (B9) and Round Grill (B7) into place.

Assembly

21



21. Attach the Warming Rack (A4) to the Barbecue Body (BI) as shown

22



22. Attach the Food Basket (C20) to the cabinet as shown.
ASSEMBLY IS NOW COMPLETE.



Our story

In 2005 four talented young chefs left for New York, asked to cook at an event in Central Park. They enjoyed working together and the guests really appreciated the food. One of the guests was so enthusiastic he booked the four chefs for another event in Los Angeles.

The idea of “The Flying Culinary Circus” was created.

Fast forward – The chefs have now travelled to more than 56 countries all over the world. Royalties as well as celebrities have enjoyed the culinary concept the chefs offer tremendously. But, as the chefs say “it’s not about how famous our guests are, it is all about sharing the fun of cooking».

Gas Leak Test

WARNING

ALL JOINTS AND CONNECTIONS MUST NOW BE LEAK TESTED BEFORE USING THE BBQ. LEAK TEST ANNUALLY, AND WHENEVER THE GAS BOTTLE IS REMOVED OR REPLACED.

ALWAYS PERFORM A LEAK TEST IN A WELL-VENTILATED AREA.

- 1 Make a mixed solution (water and liquid detergent / soap).
- 2 Ensure that there are no naked flames, heat sources and cigarettes in the vicinity when performing a leak test.
- 3 Check that the control knob on the BBQ are in the "OFF" position.
- 4 Set the regulator to the "OFF" position and connect it to the gas bottle.
- 5 Apply the liquid to all joints and connections on the gas bottle, regulator, the entire hose and all valves on the BBQ.
- 6 Open the gas tap on the regulator and carefully check for bubbles appearing anywhere the liquid has been applied.
- 7 IF BUBBLES APPEAR, SWITCH OFF THE GAS SUPPLY AND REPAIR THE PROBLEM. PERFORM A NEW LEAK TEST. DO NOT USE THE BBQ BEFORE YOU ARE SURE THAT THERE ARE NO LEAKS.
- 8 If there are still gas leaks after repeated attempts, contact your dealer.



WARNING

NEVER USE AN OPEN FLAME TO PERFORM A GAS LEAK TEST

CONNECTING GAS

- ★ Connect the gas hose to the gas rail inlet on the left hand side of the barbecue. Do not overtighten.
- ★ Do not use any sealing tape, paste or liquid on the connection.
- ★ Connect the regulator to the gas bottle according to your regulator and bottle dealer's instructions.
- ★ Gas hoses used for this product must not exceed 150 cm in length
- ★ Confirm all barbecue control knobs are in the OFF position.
- ★ We recommend propane gas for use in the Nordic Region, but butane can also be used. Butane is not very suitable for low temperatures.
- ★ Fit the regulator and the hose. Follow the assembly instructions supplied with the regulator set
- ★ Check the gas hose regularly for cracks, damage and decay. Never use a damaged gas hose.
- ★ Check that the movable plastic collar on the regulator is intact and that it has not been damaged by hot BBQ parts.
- ★ Check that the gas bottle stands on a firm, flat surface and is lower than the connector.
- ★ Use an approved gas bottle that fits the regulator supplied.

Last Check

LOCATION

- ◆ Ensure that the BBQ is placed at least 150cm in all directions from house walls, trees, plants and other flammable materials or liquids when in use.
- ◆ Do not place the BBQ under a roof or overhang
- ◆ Ensure the BBQ is placed where there is plenty of ventilation.
- ◆ Do not BBQ below normal ground level.



FINAL CHECK

- ◆ Check that the control knobs work normally.
- ◆ Check that the gas hose is free of cracks and damage (it should always be done before using the BBQ)
- ◆ Check that the gas bottle and hose do not come into contact with hot objects.

GOOD ADVICE

- ★ **A CLEAN BBQ WORKS BETTER**, causes less smoke and will last longer.
- ★ **PREHEAT THE BBQ** for 10 minutes at full power prior to placing food on the BBQ. This gives a better result, and cuts BBQing time.

Lighting Instructions

LIGHTING INSTRUCTIONS

1. Turn all knobs to “OFF” (O), then open the tank valve.
2. Open lid during lighting
3. Press and turn control knob anticlockwise slowly to “MAX” position. The electrode will spark to light the burner in sequence. Repeat the same operation when lighting each burner.
4. Elektroden vil gi en gnist når bryteren når MAX posisjon og elektroden vil tenne brenneren. Gjenta samme operasjon med de andre kontrollbryterne.
5. Turn the control knob to “O” position IMMEDIATELY if the burner does not light within 5 seconds , wait 5 minutes for gas to dispel, then repeat the lighting procedure.
6. Follow match lighting instructions if burner can't be lit after repeated 3-4 times

MANUAL IGNITION

You can light the burner manually if the electronic ignition fails. Wearing a protective glove, hold a long kitchen match or extended gas lighter alongside the burner flame ports and turn on the gas control to MAX. Sight the burner to ensure that flames are appearing at the flame ports..

1. Turn all knobs to “OFF” (O), then open the tank valve.
2. Open the lid during lighting.
3. Use a match or a grillighter and insert lit match through the right match- lighting hole on the right side of the barbecue body and place near rightmost burner porthole.
4. Press and turn the knob anti klokwise to “MAX” position, and make sure the burner lights and stays lighted
5. Repeat 3~4 to light other burners.

IF THE BBQ WILL NOT LIGHT USING NORMAL OR MANUAL LIGHTING, REFER TO THE TIPS SECTION IN THE TROUBLESHOOTING MANUAL, OR CONTACT YOUR DEALER.

WARNINGS

- ALWAYS KEEP AN EYE ON THE BBQ WHEN IN USE. NEVER ALLOW CHILDREN OR OTHERS WHO REQUIRE SUPERVISION NEAR THE BBQ WHEN IN USE.
- THIS BBQ IS ONLY INTENDED FOR OUTDOOR USE AND MUST NOT BE USED UNDER A ROOF. DO NOT USE UNDER NORMAL GROUND LEVEL. GAS CAN ACCUMULATE AND REPRESENT A DANGER OF EXPLOSION. GAS ACCUMULATION CAN ALSO CAUSE OXYGEN DEFICIENCY.
- THIS BBQ IS ONLY INTENDED FOR USE WITH GAS. NEVER USE LAVA STONES, BRIQUETTES, CHARCOAL, LIGHTING FLUID ETC.
- NEVER LIGHT THE BBQ WITH THE LID CLOSED.
- PERFORM THE LEAK TEST REGULARLY AND ALWAYS WHEN CHANGING THE GAS BOTTLE AFTER LONG STORAGE. ALWAYS CHECK THE GAS HOSE FOR DAMAGE AND CRACKS EACH TIME YOU USE THE BBQ.
- DISCONNECT THE GAS BOTTLE WHEN THE BBQ IS IN USE OR BEFORE MOVING IT.
- IF STORING THE BBQ IN A GARAGE OR BASEMENT BELOW GROUND LEVEL, DO NOT STORE THE GAS BOTTLE THE SAME PLACE, AS IT MUST BE STORED ABOVE NORMAL GROUND LEVEL.
- THE VENTS IN THE BBQ MUST NEVER BE SEALED OR BLOCKED.
- CHECK THAT THE VENTURI (VENTILATION) ON BURNERS AND SIDE BURNERS ARE NOT SEALED OR BLOCKED BEFORE USE.
- CLEAN THE BBQ REGULARLY AND THOROUGHLY.
- BE SURE THE BBQ IS COOL BEFORE YOU PUT ON THE BBQ COVER.

MAINTENANCE

- ★ Check that the burners are burning correctly regularly.
- ★ Remove the BBQ grate and flame guards.
- ★ Light the BBQ normally.
- ★ Turn the controls from low to high, check there is a difference in flame strength and that the flames are blue, not orange. If the burners act abnormally, refer to the troubleshooting chapter.
- ★ Remove any fat or deposits from previous use with a BBQ brush..

CLEANING

All cleaning and maintenance should be carried out when the appliance is cool and with the fuel supply turned OFF at the gas cylinder after each time use. DO NOT mistake brown or black accumulation of grease and smoke for paint. Interiors of gas BBQs are not painted at the factory (and should NEVER be painted). Apply a strong solution of detergent and water or use a BBQ cleaner with scrub brush on insides of BBQ lid and bottom. Rinse and allow to completely air dry. DO NOT apply a caustic BBQ / oven cleaner to painted surfaces. DO NOT use abrasive or flammable cleaners, as it will damage the parts of the product and may start a fire.

PLASTIC PARTS

Wash with warm soapy water and wipe dry.

BBQ BODY

Lack of maintenance / cleaning, can lead to the BBQ rust. To keep the barbecues beautiful and long lasting, it is recommended to use mild detergents and hot water. Wipe the surface with a non-abrasive wash cloth. Acid-free oil is recommended to avoid rust.

COOKING GRID AND FLAME TAMER

Use a mild soapy water solution. Non-abrasive scouring power can be used on stubborn stains, then rinse with water. Make sure the cooking grids are well dried before storage.

INSECTS AND VERMIN

After long-term storage, insects and other vermin can be found in the BBQ. If you experience problems with lighting or irregular flames, it can be due to unwanted guests blocking the gas supply. In such instances, dismantle and clean the burners. Replace the burners when they are dry.

- ★ Check that the gas hose is not damaged by mice or rats.

MAINTAIN THE BURNERS

1. Turn gas off at control knobs and LP Tank.
2. Remove cooking grates and grease tray.
3. Remove screw at end of burner using a screwdriver.
4. Carefully lift each burner up and away from valve openings.
5. Wire brush entire outer surface of burner to remove food residue and dirt.
6. Clean any blocked ports with a stiff wire such as an open paper clip.
7. Check burner for damage, due to normal wear and corrosion some holes may become enlarged. If any large cracks or holes are found replace burner.
8. Carefully refit burners.
9. Replace flametamer and cooking grid.

Grease Fire

Lack of maintenance may result in a grease fire because old fat and grease takes fire when it reaches high temperatures.

PREVENT GREASE FIRE

- Clean the BBQ regularly to avoid fires. Always, remove residues of grease and food after the BBQ has been used.

IN CASE OF GREASE FIRE

In case of grease fire, close the gas supply and disconnect the controller. Leave the lid open and wait until the fire goes off by itself.

NB!

FIRES CAUSED BY GREASE, WILL DAMAGE THE METAL, PAINT AND ENAMEL.

DAMAGE TO THE BBQ CAUSED BY GREASE FIRES, ARE NOT COVERED BY THE WARRANTY AS IT IS DUE TO INCORRECT USE.

NB!

**NEVER USE WATER TO EXTINGUISH A GREASE FIRE!
CLEAN THE BBQ REGULARLY TO AVOID GREASE FIRES**

NB!

- YOUR BARBECUE IS NOT DESIGNED TO BE USED WITH MORE THAN 50% OF THE COOKING AREA AS A SOLID PLATE – THIS INCLUDES BAKING DISHES.
- FULL COVERAGE WILL CAUSE EXCESSIVE BUILD-UP OF HEAT AND DAMAGE THE BARBECUE. THIS IS NOT COVERED BY WARRANTY.

The Flying Culinary Circus

Try to make one of our favorites



SINGAPORE CHILI CRAB

King crab loins split in half
 Chinese buns
 Fresh coriander
 Oil for deep frying, approx. 7 dl

Sauce:
 Oil
 2 finely chopped shallots
 2 tbps finely chopped ginger
 2 finely chopped garlic cloves
 1/2-1 Chili
 2 chopped tomatoes
 1 can crushed tomatoes (400-500 g)
 1 dl sweet chili sauce
 1/2 dl soy sauce
 Sriracha

Start with the sauce. Sauté shallots, ginger, chili and garlic with some cooking oil. Add chopped and canned tomatoes along with the sweet chili sauce. Let it simmer for 5 minutes. Add soy sauce and sriracha to taste.

Brush the crab loins with oil so it won't stick to the grill. Sprinkle some salt over it before placed on grill, meat side down. Deep fry the chinese buns until golden.

Add the crab to the sauce and sprinkle with some fresh coriander right before serving.

See us make this on  YouTube

GET MORE FANTASTIC RECIPES:
youtube.com/flyingculinaryTV

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
BURNER WILL NOT LIGHT	Empty gas bottle	Replace gas bottle
	Damaged regulator	Check/replace the regulator
	Burner is blocked	Clean the burner
	Gas supply is blocked	Clean gas ventury or hose
	Electrode is broken or dirty	Clean the electrode
	Windy conditions	Place the BBQ in a less exposed position.
	Ignition wire is damaged or fitted incorrectly	Make sure wire is mounted correctly
LOW FLAME	Empty gas bottle	Replace gas bottle
	Irregular gas supply	Check/replace the regulator
	The burner is blocked	Clean the burner
	Gas supply or hose is blocked	Clean gas ventury or hose
LOW FLAME OR BACKFIRE	Gas bottle is too small	10 kg or larger bottle is recommended
	Burner is blocked	Clean the burner
	Gas supply or hose is blocked	Clean gas ventury or hose
	Windy conditions	Place the BBQ in a less exposed position
TROUBLE TURNING THE KNOBS	Gas valve jammed	Replace gas valve. NB! Knobs should be pressed in and turned
HEAVY SMOKE	Fatty foods on the BBQ	Trim away excess fat from meat. Clean the fat tray.

Consumer Contact

This product is covered by a warranty in accordance with consumer legislation. It has undergone strict quality controls and testing at the factory.

If there are any parts missing or the product has been damaged, please contact your dealer or the consumer contact below for help.

Faults due to misuse, lack of maintenance or modification of the product will invalidate the warranty. Damaged parts not due to a fault with the product will be invoiced according to our price list + carriage and administration fee.

If new parts are needed or in the event of a warranty claim, please contact your dealer or consumer contact:

NORDIC SEASON PRODUCTS AS
2007 KJELLER, NORWAY

+47 924 78600
✉ support@fccbbq.com
www.fccbbq.com

Always attach your receipt and product serial number when making a warranty claim.
Serial number is located on the side of the BBQ.

Produced in China for Nordic Season Asia Co., Ltd.