

The Flying Culinary Circus

FCCBBQ



PERFORMANCE
4.1s

INSTRUCTION MANUAL & MAINTENANCE

FCC-G-18230-41 / GD4843S



OUTDOOR USE ONLY
READ THE OPERATING INSTRUCTIONS
BEFORE USING THE APPLIANCE.

Share the fun of cooking!

Contents

Warnings.....	3
Technical data Performance 4.1s	4
Gas category.....	4
Exploded drawing	5
Parts list	6
Assembly instructions	7
Gas leak test	14
Regulator and hose	15
Last Check	16
Lighting instructions.....	17
Warnings	18
Maintenance	19
Grease fire	20
Singapore Chili Crab.....	21
Troubleshooting.....	23
Consumer Contact.....	24




Read carefully

WARNINGS

- FAILURE TO FOLLOW THE INSTRUCTIONS PROVIDED CAN IMPLY A RISK OF SERIOUS INJURY TO PERSONNEL AND FIXED INSTALLATIONS.
- THE BBQ IS INTENDED FOR OUTDOOR USE ONLY IN WELL-VENTILATED AREAS. NEVER BBQ IN ENCLOSED SPACES OR UNDER A ROOF, DUE TO THE DANGER OF THE LACK OF OXYGEN.
- ACCESSIBLE PARTS OF THE BBQ BECOME VERY HOT DURING USE. KEEP CHILDREN AND OTHERS WHO NEED SUPERVISION AT A SAFE DISTANCE.
- NEVER MOVE THE BBQ WHILE IN USE OR CONNECTED TO THE GAS BOTTLE.
- SHUT OFF THE GAS ON THE REGULATOR AFTER USE AND DISCONNECT FROM THE GAS BOTTLE.
- MODIFICATION OF THE BBQ CAN CAUSE DANGER AND WILL INVALIDATE THE WARRANTY.
- DO NOT PLACE THE BBQ COVER OR OTHER FLAMMABLE MATERIAL IN THE COMPARTMENT UNDER THE BBQ WHEN IT IS IN USE OR HOT.
- CLEAN THE BBQ REGULARLY AND THOROUGHLY.

Technical information

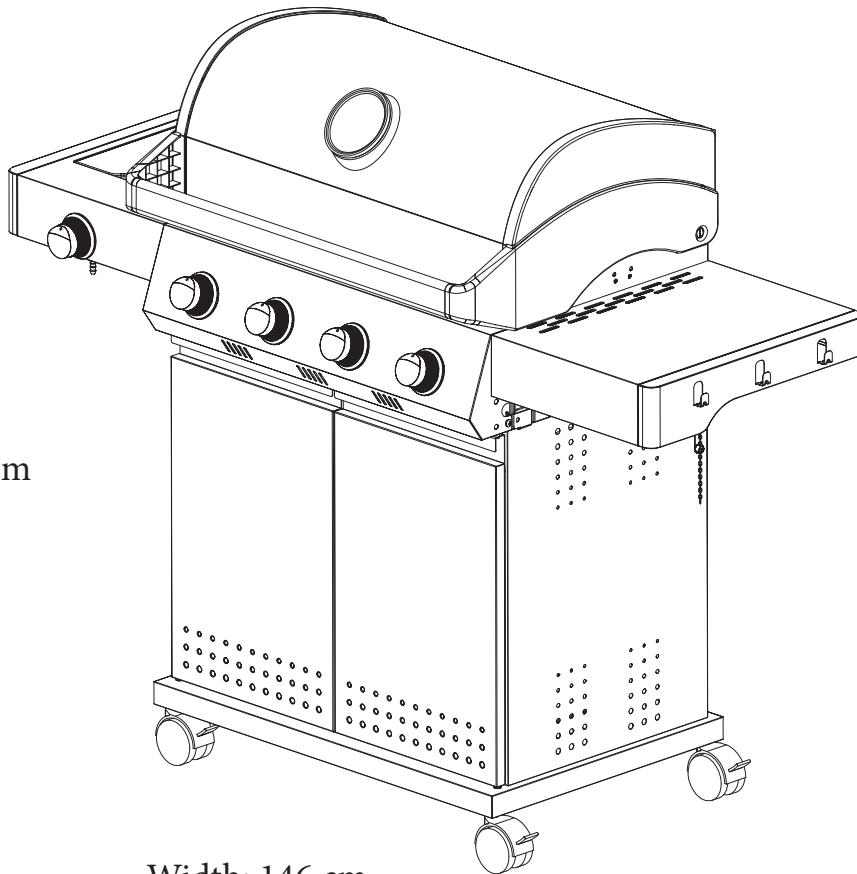

Height: 120 cm

Width: 146 cm

Total Heat input: 17.2 kW (main burner 14 kW + side burner 3.2 kW).

Gas consumption: 1253 gram/hour (main burner: 1020 g/h + side burner: 233 g/h)

Gasbottle (not included): Use standard bottle approved for use in the Nordic Region. Even though butane and propane gas can be used, we recommend propane for use in the Nordic Region. Approved hoses and regulators are available from most outlets selling gas equipment.

NB! Gas hoses used for this product must not exceed 120 cm in length.

- ONLY THE GAS TYPE AND GAS CATEGORY LISTED IN THE RATING LABEL COULD BE USED ON YOUR APPLIANCE.

DESTINATION OF COUNTRIES TO USE	VALVE SIZE	GAS TYPE	GAS CATEGORY
LU, NL, DK, FI, SE, CY, CZ, EE, LT, LV, MT, SK, SI, BG, IS, NO, TR, HR, RO, IT, HU	Dia 0.91 mm (main burner) 0.86 mm (hot plate burner)	G30 (butane), G31 (propane) and their mixtures	I3B/P(30)


THE APPLIANCE IS SET TO OPERATE

- I3B/P(30): G30 (Butane), G31 (propane) and mixtures of these.


CE 2531-18

This product is produced according to EUROPEAN GAS APPLIANCE STANDARD EN498-2012 and EN484-1997 and is CE certified.

Exploded drawing

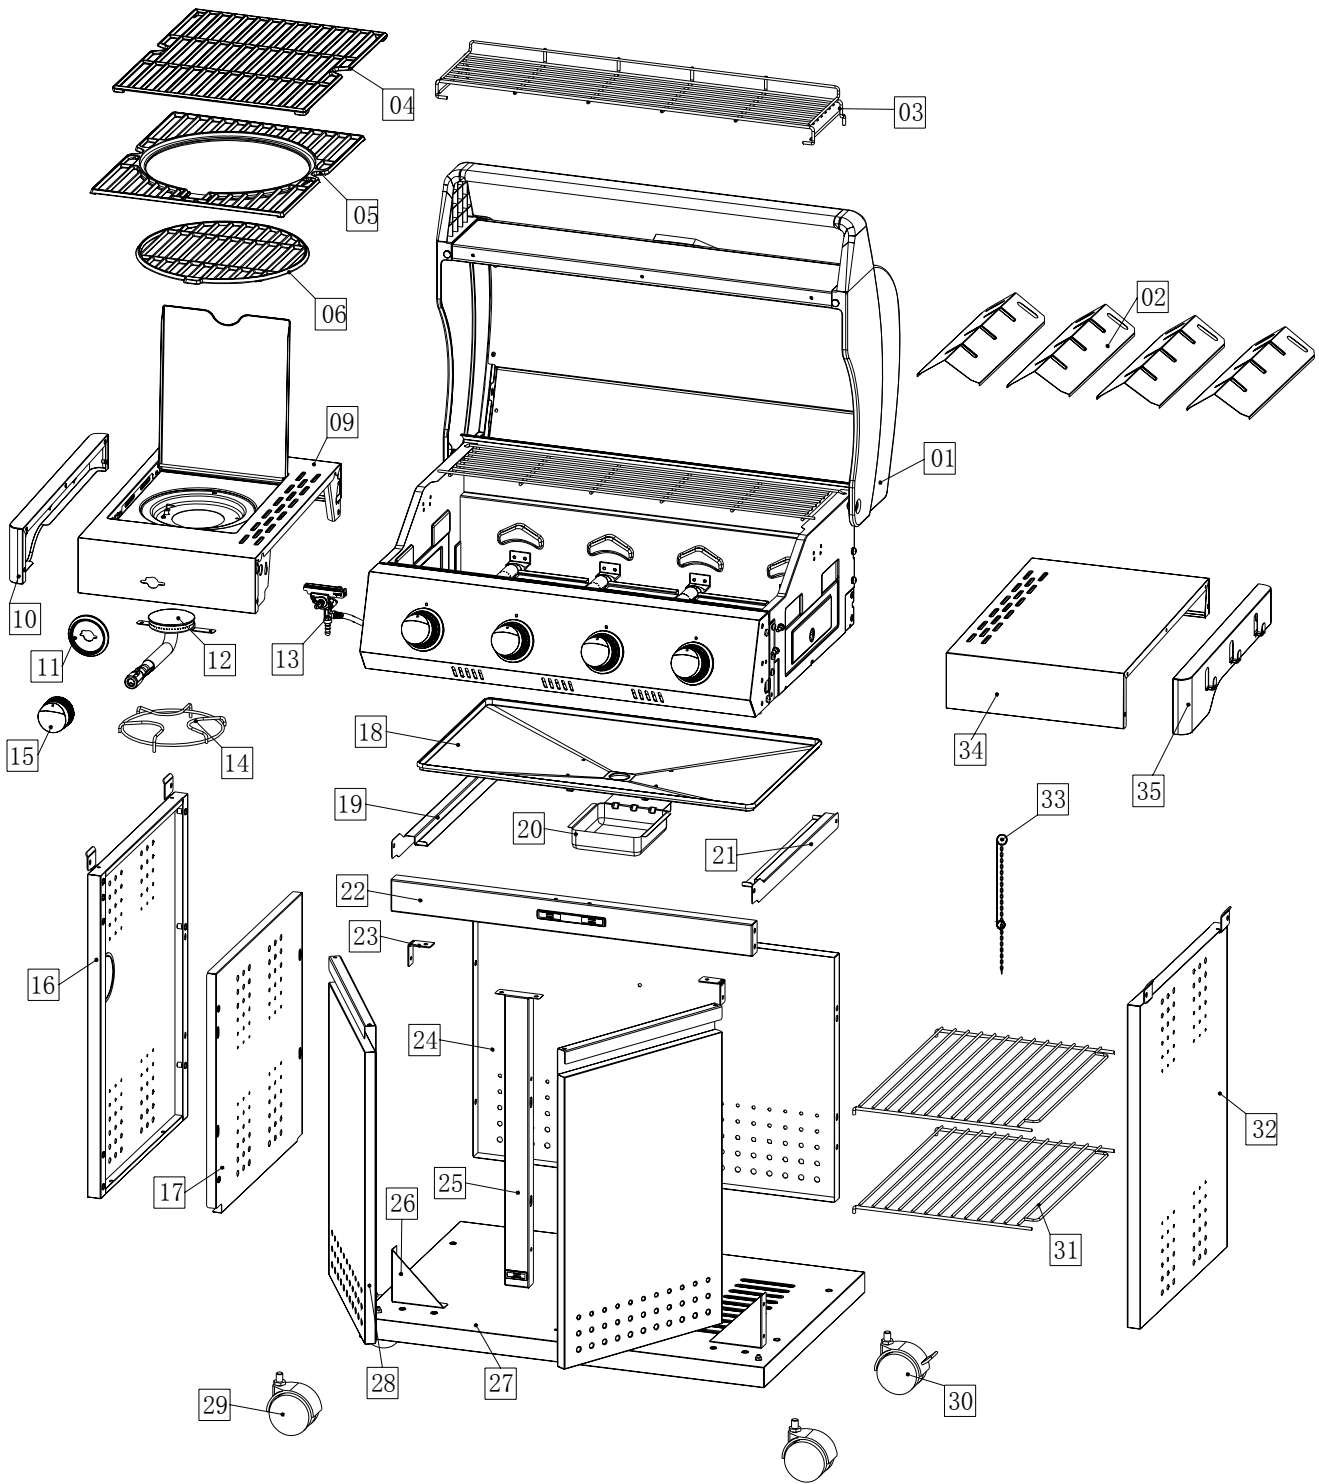

Please follow these instructions step by step. A screwdriver is necessary when assembling the BBQ. The BBQ should be assembled by two persons.

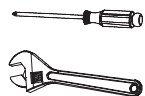

**WARNING! EXERCISE CAUTION WHEN USING ELECTRIC TOOLS
- THEIR STRENGTH CAN DAMAGE THE SCREWS.**


Parts List

CODE	DESCRIPTION	QTY
1	MAIN BURNER ASSEMBLY	1
2	FLAME TAMER	4
3	WARMING RACK	1
4	CAST IRON GRILL	1
5	MULTIFUNCTION CAST IRON COOKING GRILL	1
6	MULTIFUNCTION CAST IRON ROUND COOKING GRILL	1
9	SIDE BURNER WELD ASSEMBLY	1
10	SIDE BURNER DECORATION BOARD	1
11	DECORATION RING	1
12	SIDE BURNER	1
13	SIDE BURNER VALVE ASSEMBLY	1
14	SIDE BURNER BRACKET	1
15	KNOBS ASSEMBLY	1
16	LEFT SIDE PANEL	1
17	CABINET DIVIDER	1
18	GREASE TRAY	1
19	LEFT STATOR OF OIL TRAY	1
20	GREASE CUP	1
21	RIGHT STATOR OF OIL TRAY	1
22	DOOR GIRDER	1
23	CABINET STIFFENING BOARD	2
24	BACK BOARD	1
25	DOOR PILLAR	1
26	CABINET STIFFENING SCUTE	2
27	BOTTOM PANEL WELD ASSEMBLY	1
28	DOOR ASSEMBLY	2
29	CASTORS	2
30	CASTORS WITH BREAK	2
31	SHELF	2
32	RIGHT SIDE PANEL	1
33	LIGHTING CANDLE ASSEMBLY	1
34	RIGHT SHELF WELD ASSEMBLY	1
35	RIGHT SHELF DECORATION BOARD	1

CODE	HARD WARE	QTY
A	M6 x 12 BOLT	44
B	DOOR AXE	2
D	M4x8 BOLT	12


Assembly

1

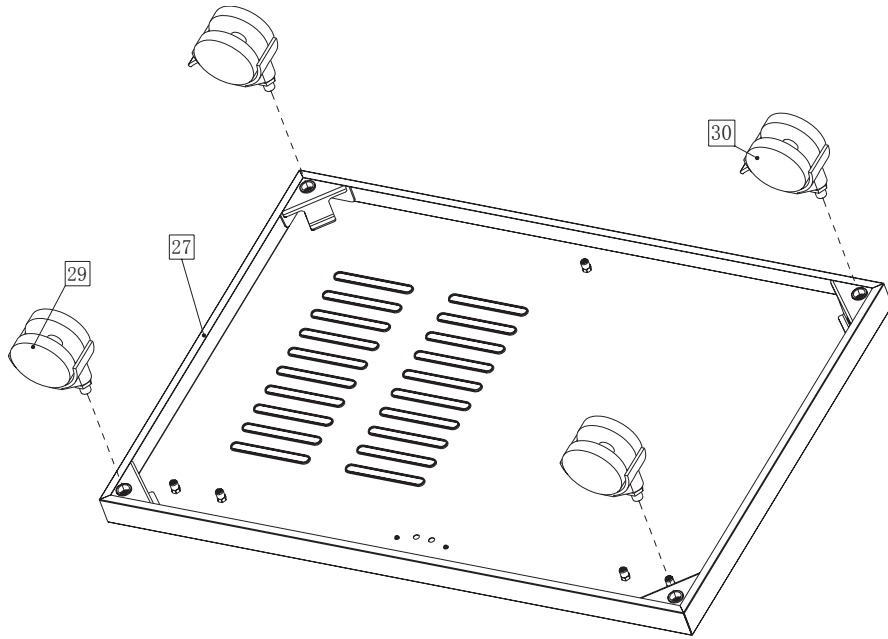

1. To assemble 4 castors (number 30 & 29, 2 with break and 2 without) on the bottom panel, please tighten up the screws.


2

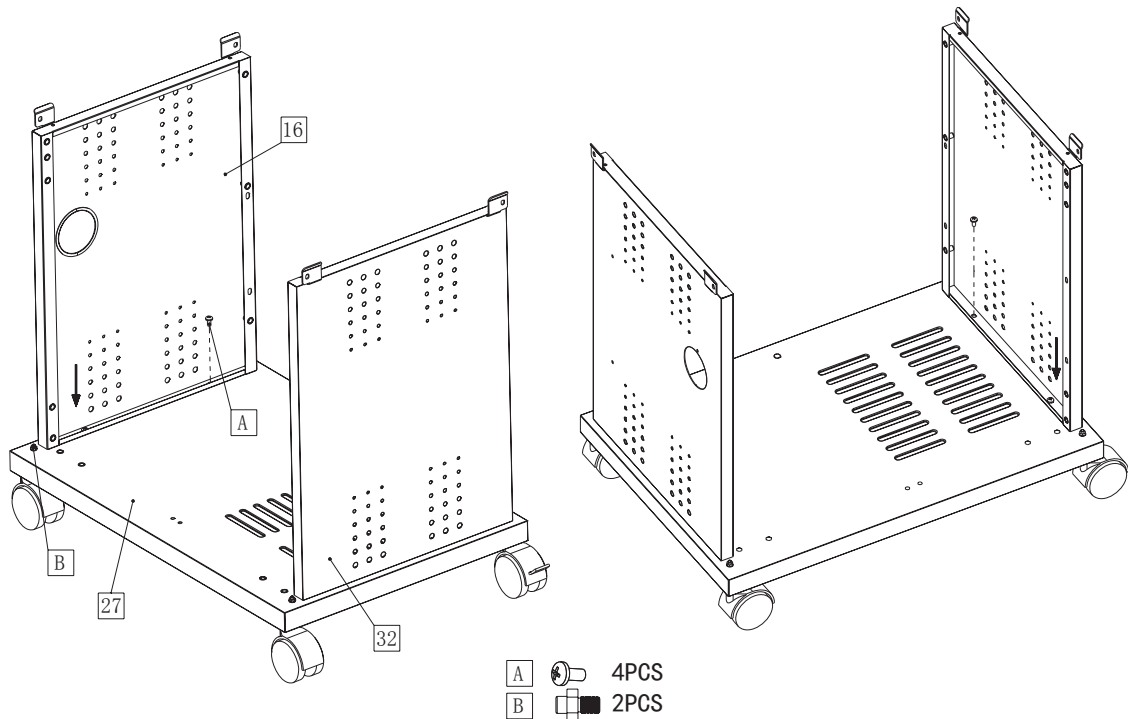

2. Use screw A to assemble left side panel (16) and right side panel (32) to the bottom panel (27), and assemble the pivot (B) assembly on the bottom as well.

Assembly


3

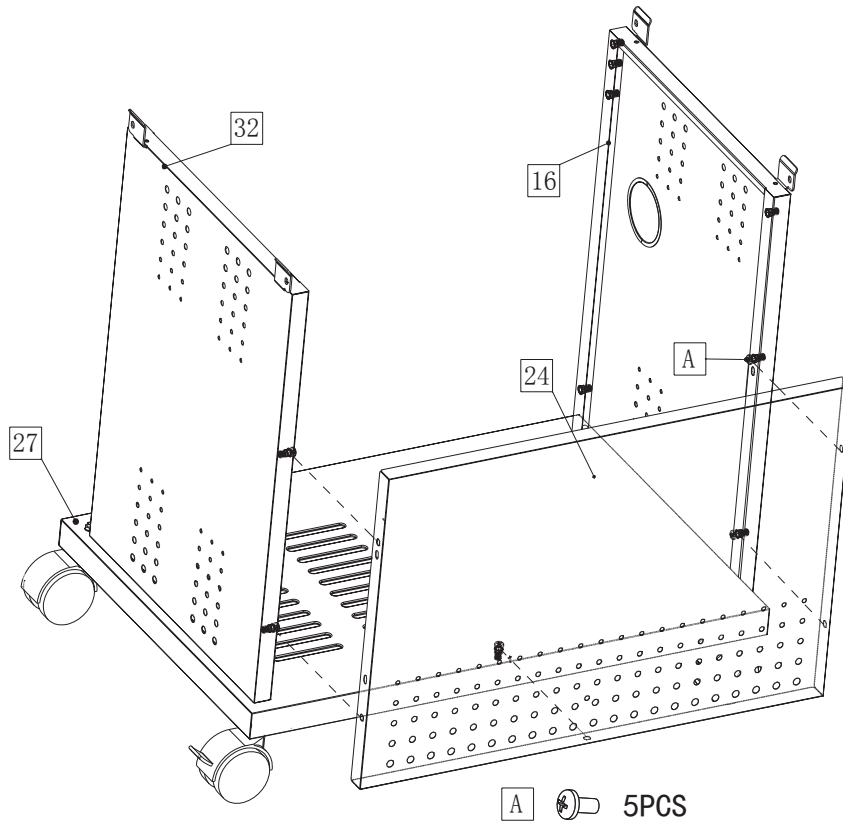

A  5PCS

3. Use screw (A) to assemble back panel (24) to left side panel (16) and right side panel (32) and bottom panel (27)

4

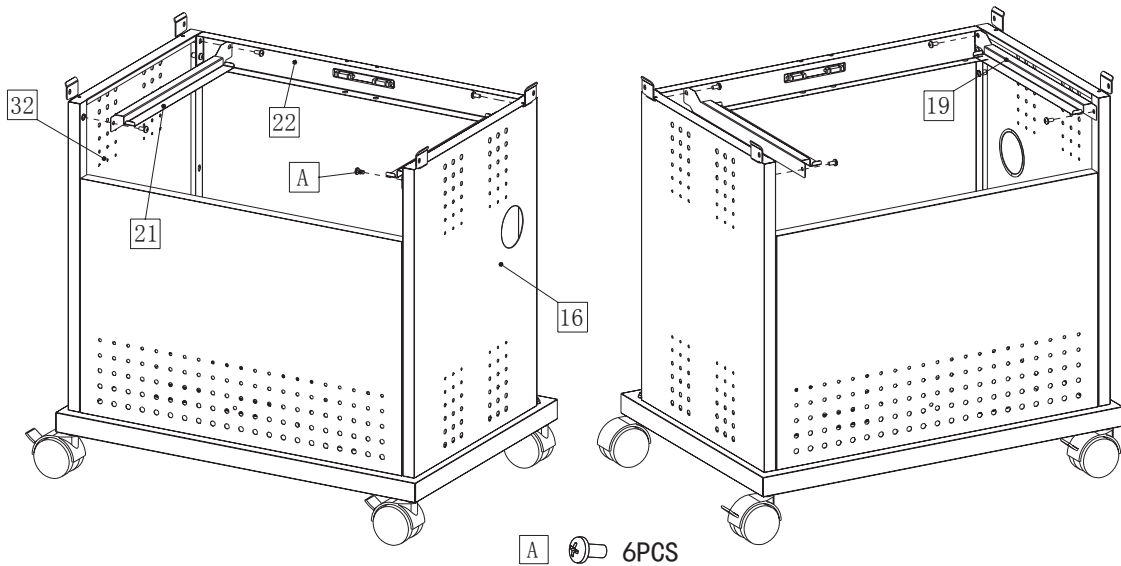


A  6PCS

4. Firstly use the screw (A) to fix the door girder to the left side side panel (16) and right side panel (32), then use screw (A) to fix the left stator of oil tray (19) on the left side panel (16), use screw (A) to fix the right stator of oil tray (21) to the right side panel (32), shown in the illustration above.


Assembly

5

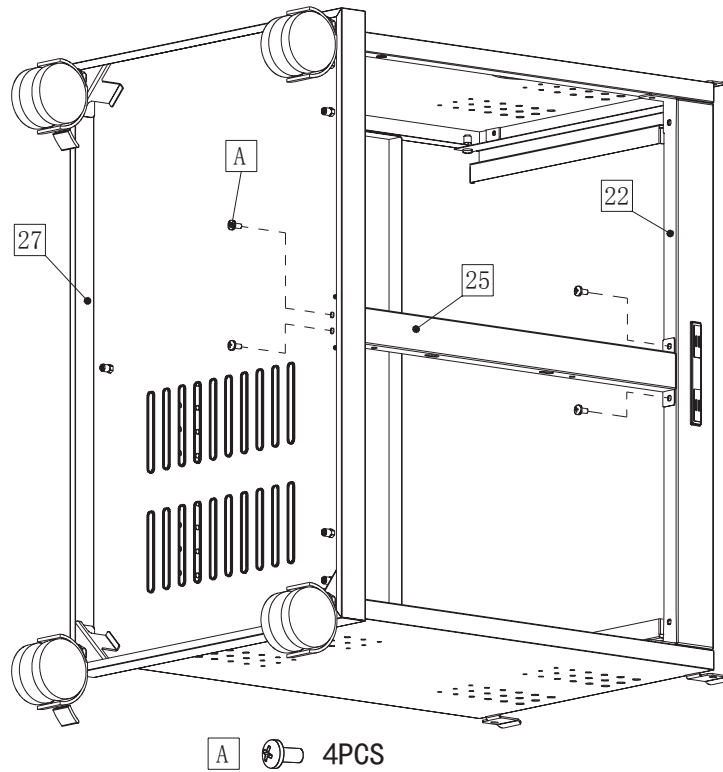

5. Use screw A to assemble door pillar (25) to the door girder (22) and bottom assembly (27), shown as the illustration above.


6

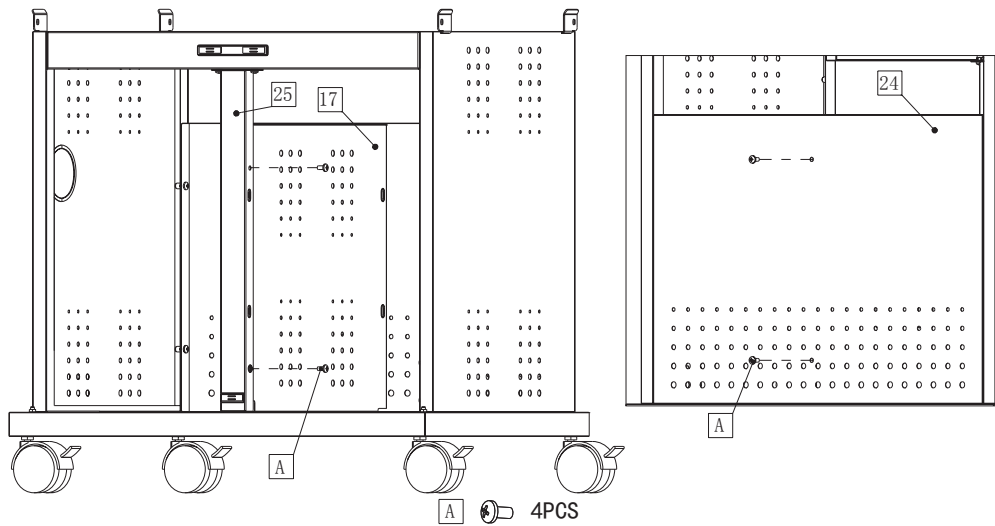

6. Use screw A to fix the cabinet divider (17) to the door pillar (25) and back panel (24), shown as shown in illustration above.

Assembly


7

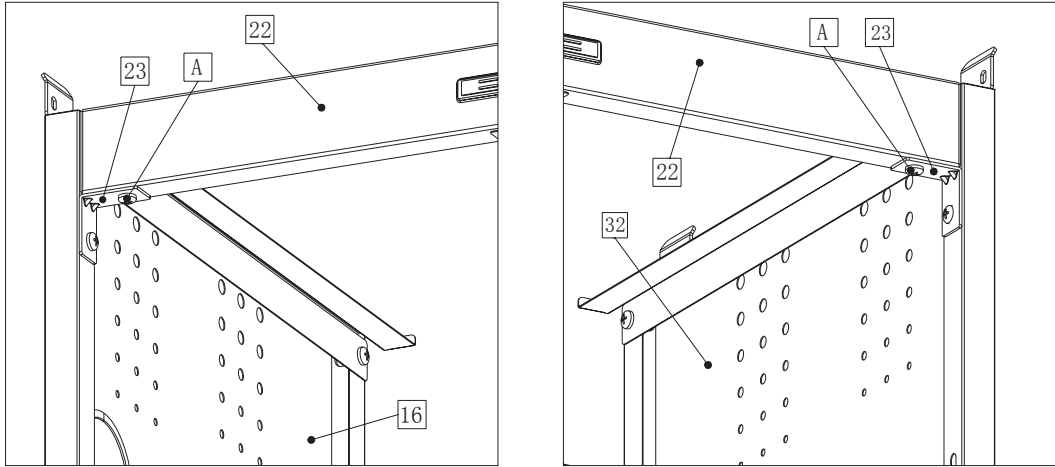

A  4PCS

- 7.** Use screw A to assemble the cabinet stiffening board (23) upper to the door girder (22) and left side weld assembly (16); use the screw to assemble the cabinet stiffening board (23) upper to the door girder (22) and right side weld assembly (32).

8

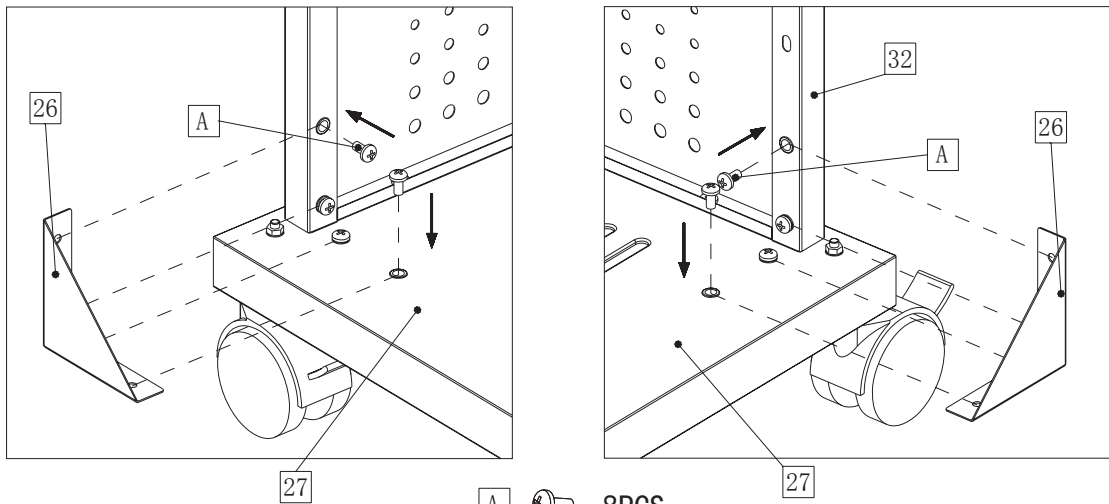


A  8PCS

- 8.** Use screw A to assemble the cabinet stiffening scute (26) upper the bottom (27) and left side assembly (16); Use screw A to assemble cabinet stiffening scute (26) upper the bottom (27) and right side assembly (32), shown as below picture.


Assembly

9

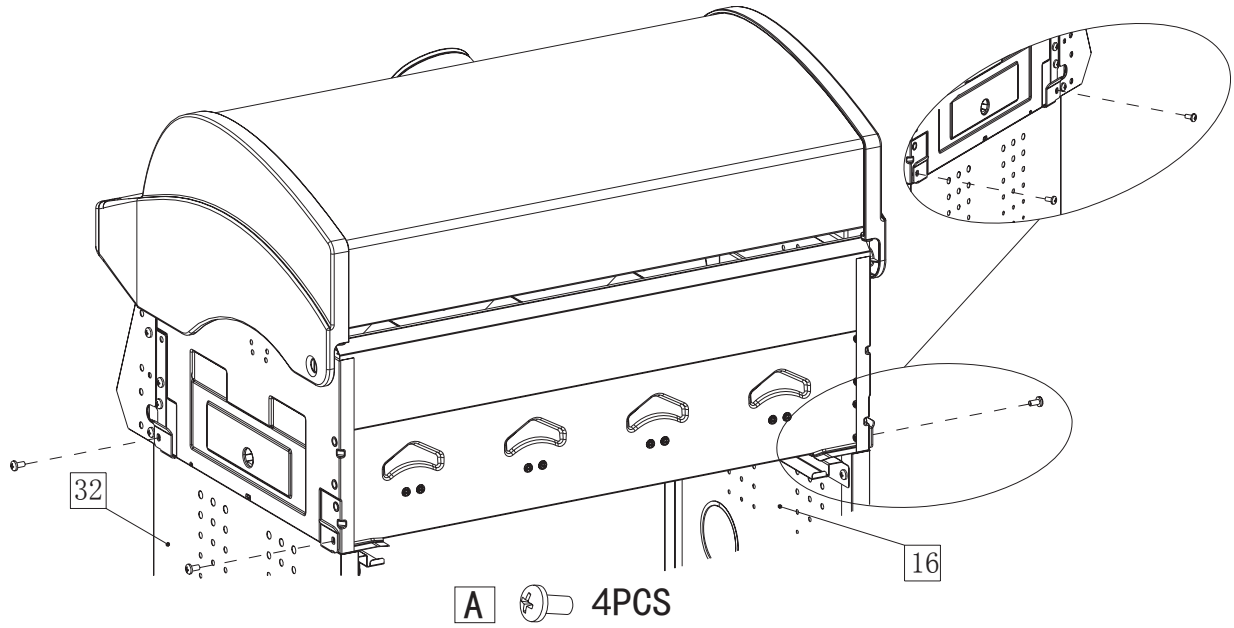

9. Use Screw (A) to fix the main burner assembly (01) upper to the left side shelf assembly (16) and right side shelf assembly (32), shown as below picture.


10

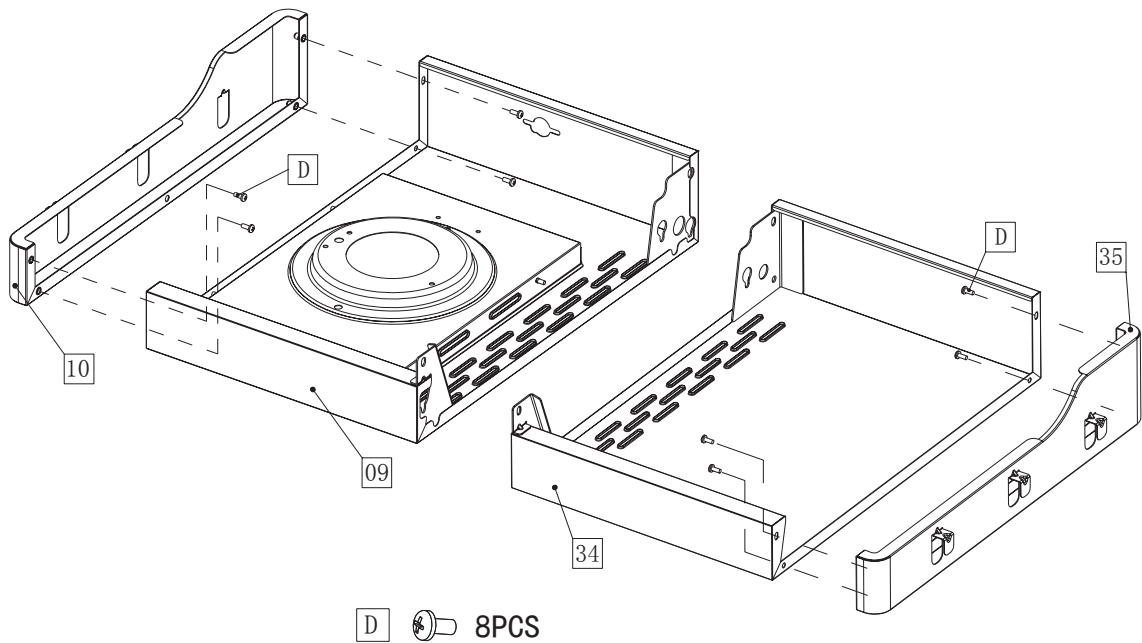

10. Use screw D to assemble the right shelf decoration board (35) on the right shelf (34), use screw D to assemble the left shelf decoration board (10).

Assembly

11

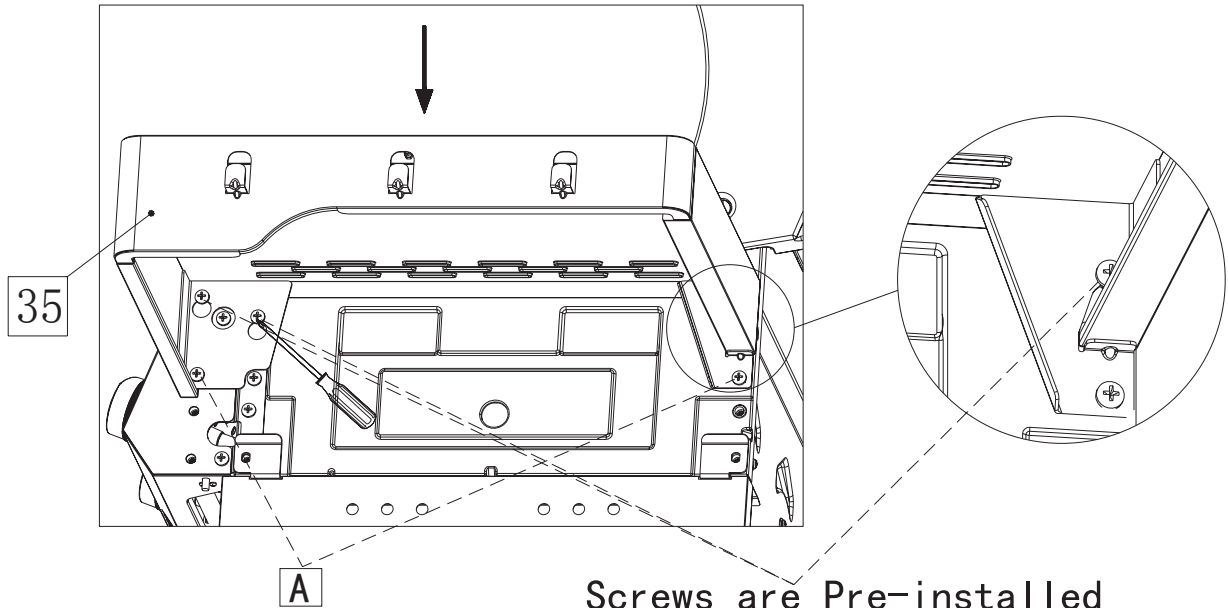


Screws are Pre-installed
3pcs M6x16

A  2PCS

11. Use the screw (A) to assemble the foldable right shelf weld assembly to the main burner assembly (OI), shown as in the illustration above.

12

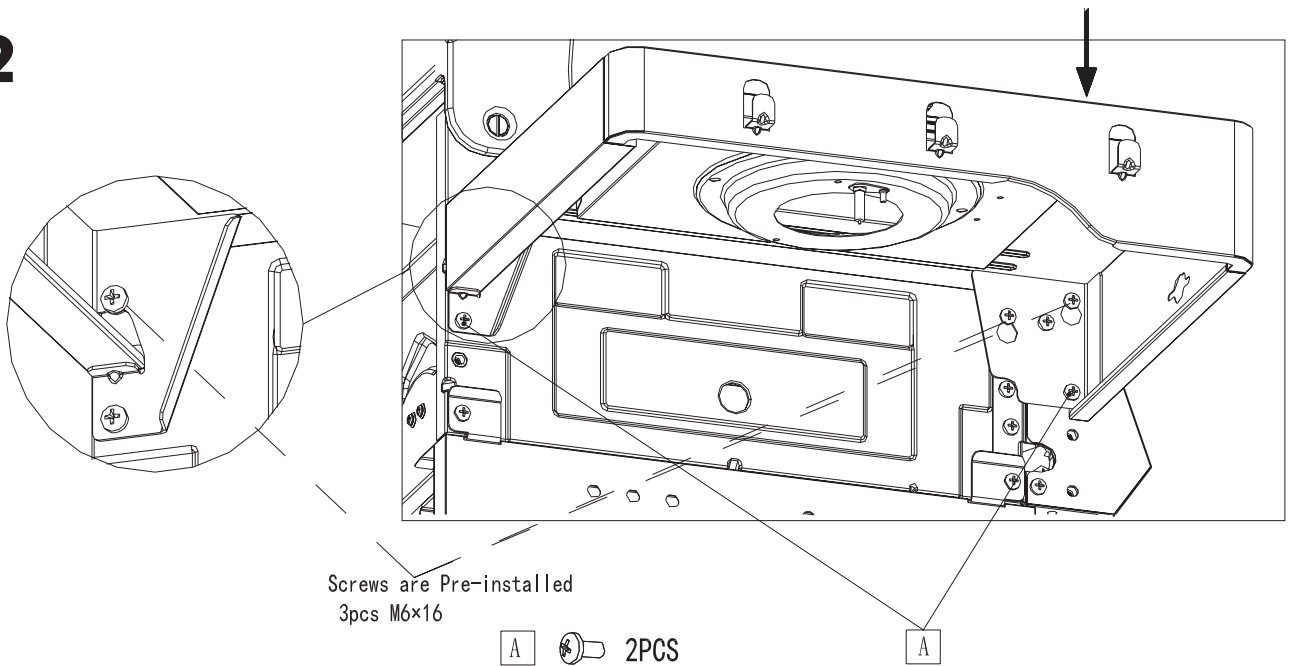



Screws are Pre-installed
3pcs M6x16

A  2PCS

12. Firstly pre-assemble 3pcs screws (M6*16), and fix the left side burner assembly, then use 2pcs screws A to fix the side burner assembly, at the same time to tighten up the preassembly screws, shown as below.

Assembly






13

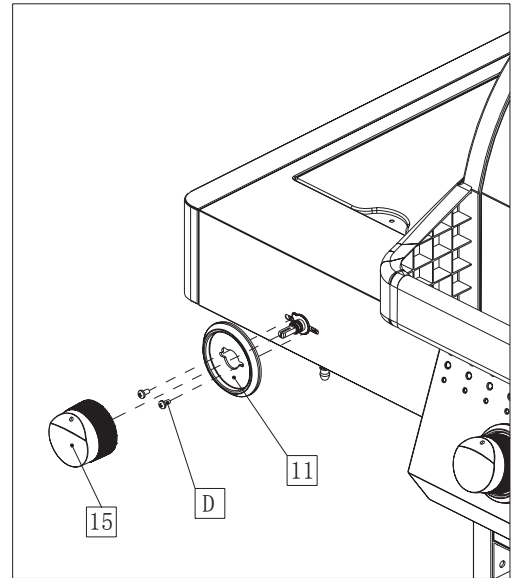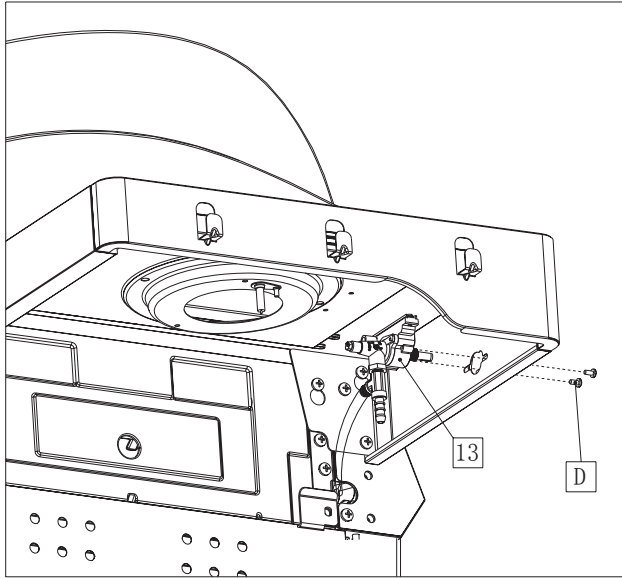

D  2PCS

- 13.** Use screw D to assemble the side burner valve assembly (13) and decoration ring (11) to the left side burner assembly, and assemble the knobs (15).

14

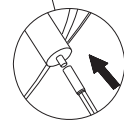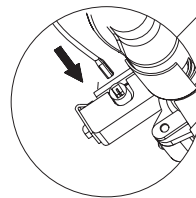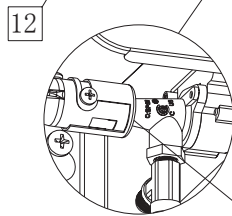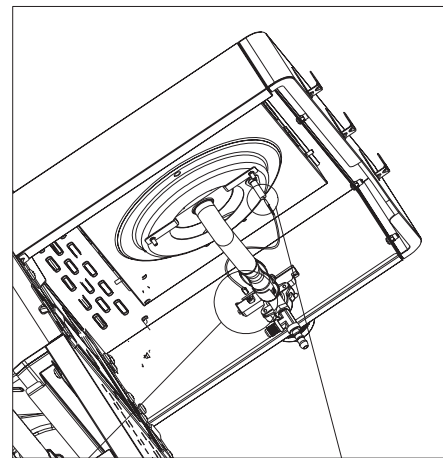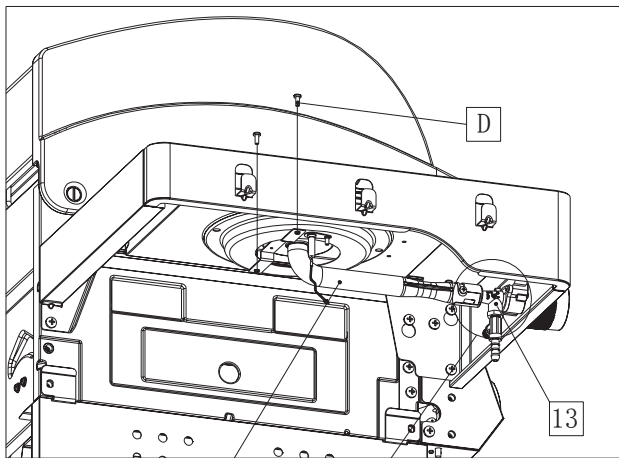


D  2PCS

- 14.** Firstly insert the side burner assembly (12) to the side burner valve assembly (13), and then use the screw D to fix it to the side burner assembly.

To insert the wire port to the side burner valve assembly and end electrode of the lighting candle, please make sure to insert to the right position.


Assembly

15

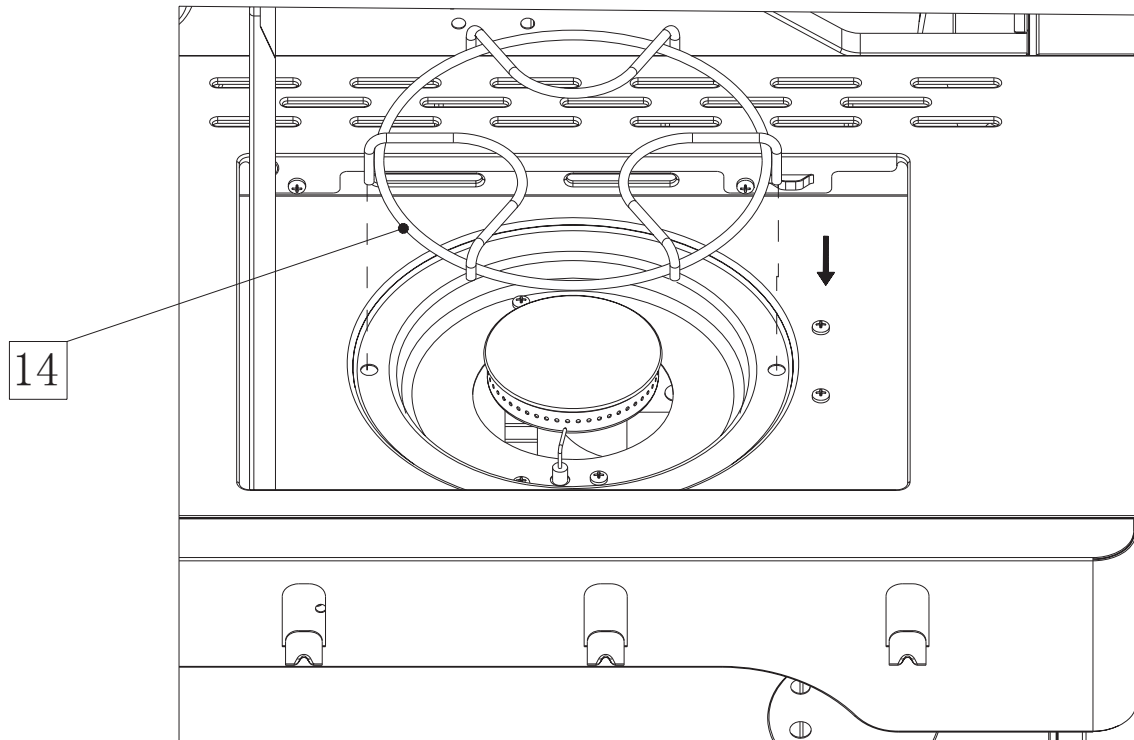

15. Put the pot support (14) into the holes of left side burner table.


16

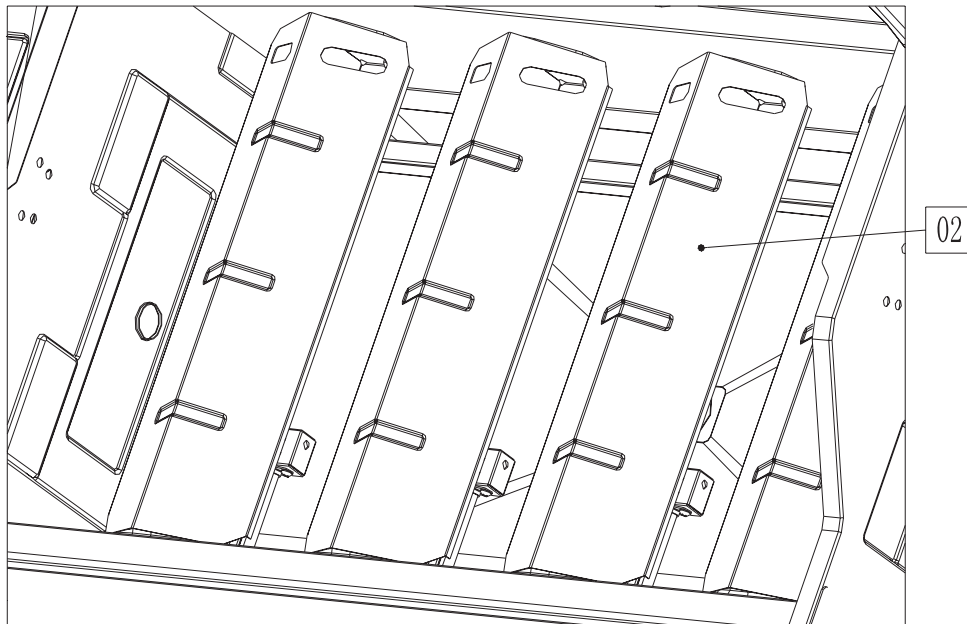

16. Lay the Flame Tamer (02) into the body.


Assembly

17

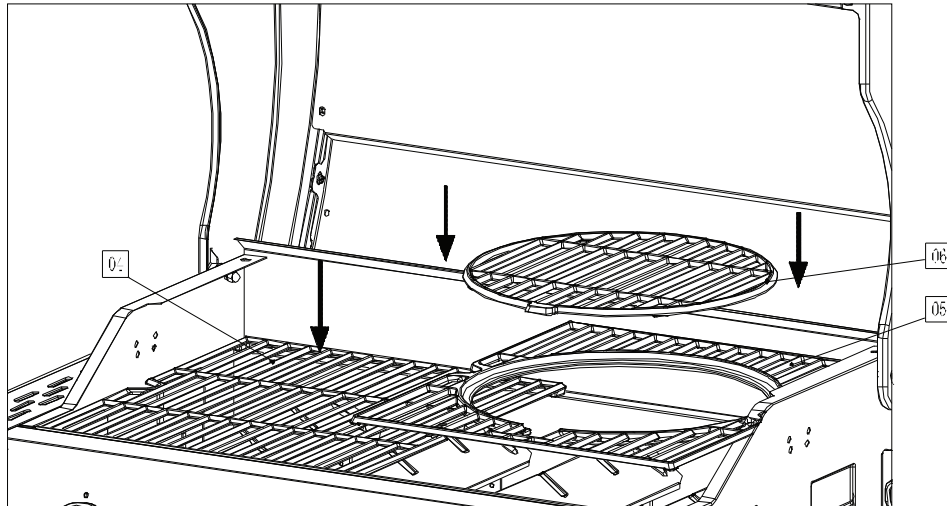


17. Please put the cast iron grill (04) and multifunction cast iron grill (05) into the firebox, and then the multifunction round cast iron grill (06) into the round opening of the multifunction cast iron grill (05).

18

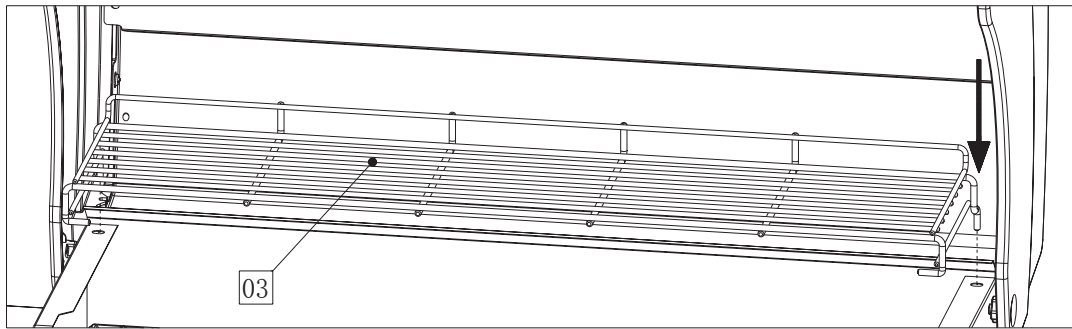


18. Insert warming rack (03) making sure that the tabs on the warming rack fit into the predrilled holes in the firebox.

19

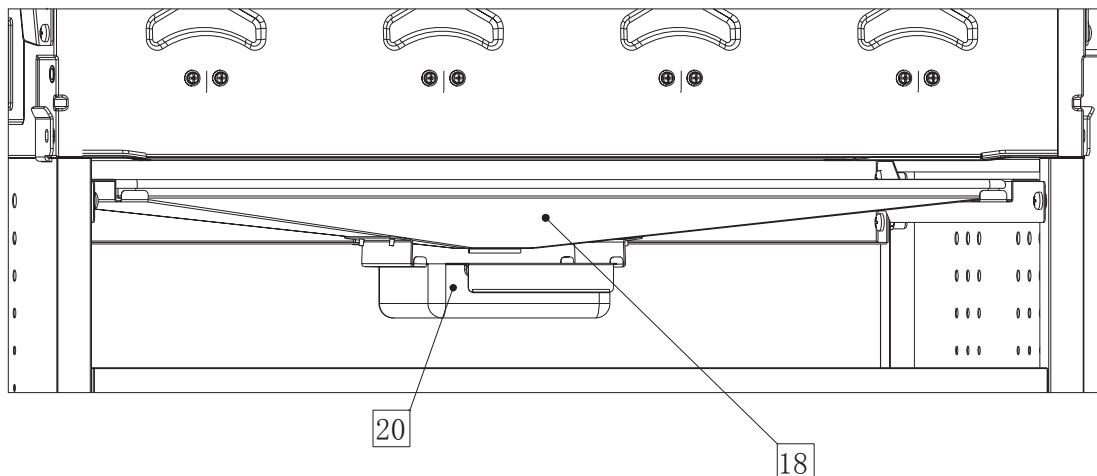


19. Insert the Drip Tray (18) into the bottom of firebox, then put the Grease Cup (20) on the slot as shown in illustration above.

20

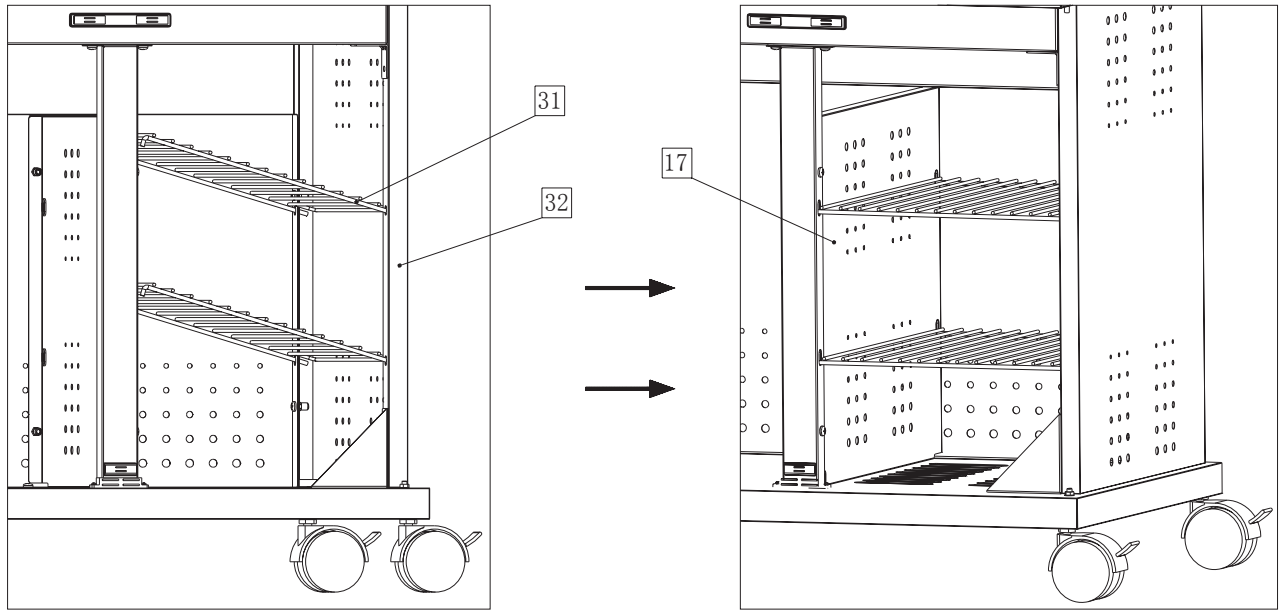

- 20.** To assemble the shelves (31) upper to the right side shelf (32) and cabinet partition (17) please note that to sideling the shelf before insert inside the cabinet.


21

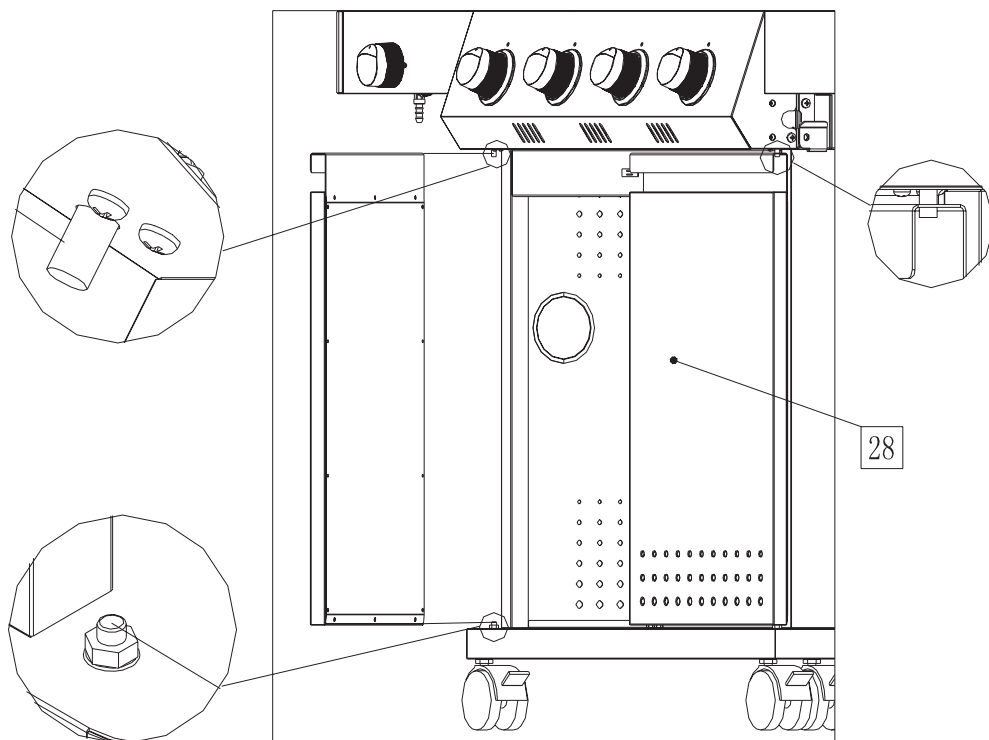

- 21.** Assemble the two sets of the door assembly (28) to the cabinet, please note that must insert the holes under the door to the pin, and press the spring catch, then to insert the hole from the door assemble to the spring catch.


Assembly

22

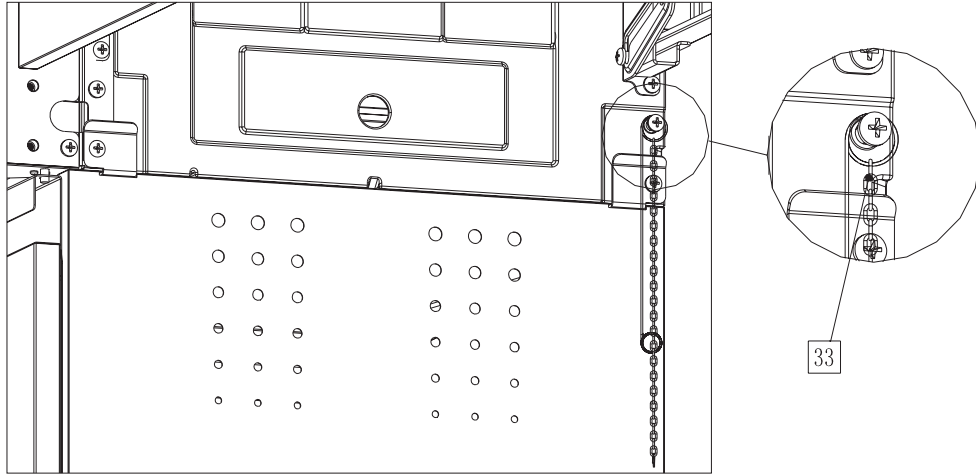

22. Hang the single loop end of matchstick holder (33) onto the screw on right firebox.

23

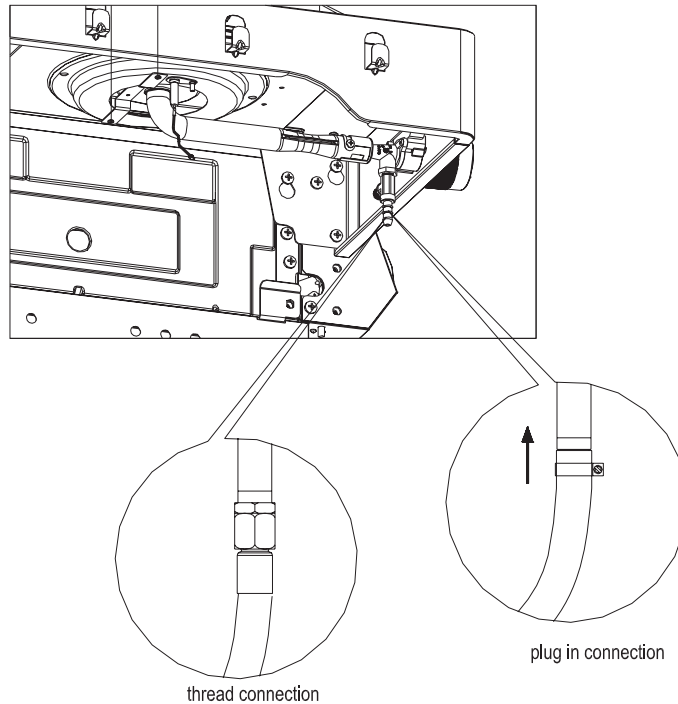

23. Connect the correct flexible hose to the gas inlet connection.
1) If the gas inlet is a nozzle, plug in the hose and fix it with a clamp firmly.
2) If the gas inlet is a thread type, connect the flexible hose with left thread connector.
Check up the gas tightness after connection.
The flexible tube should avoid coming in contact with hot surface or directly placing below the side burner.

NB!

ASSEMBLY IS NOW COMPLETE. ALL JOINTS AND CONNECTIONS MUST NOW BE LEAK TESTED BEFORE USING THE BBQ. LEAK TEST ANNUALLY, AND WHENEVER THE GAS BOTTLE IS REMOVED OR REPLACED.

Gas Leak Testing

WARNING

ALL JOINTS AND CONNECTIONS MUST NOW BE LEAK TESTED BEFORE USING THE BBQ. LEAK TEST ANNUALLY, AND WHENEVER THE GAS BOTTLE IS REMOVED OR REPLACED.

ALWAYS PERFORM A LEAK TEST IN A WELL-VENTILATED AREA.

- 1 MAKE A MIXED SOLUTION (WATER AND LIQUID DETERGENT / SOAP).
- 2 ENSURE THAT THERE ARE NO NAKED FLAMES, HEAT SOURCES AND CIGARETTES IN THE VICINITY WHEN PERFORMING A LEAK TEST.
- 3 CHECK THAT THE CONTROL KNOB ON THE BBQ ARE IN THE "OFF" POSITION.
- 4 SET THE REGULATOR TO THE "OFF" POSITION AND CONNECT IT TO THE GAS BOTTLE.
- 5 APPLY THE LIQUID TO ALL JOINTS AND CONNECTIONS ON THE GAS BOTTLE, REGULATOR, THE ENTIRE HOSE AND ALL VALVES ON THE BBQ.
- 6 OPEN THE GAS TAP ON THE REGULATOR AND CAREFULLY CHECK FOR BUBBLES APPEARING ANYWHERE THE LIQUID HAS BEEN APPLIED.
- 7 IF BUBBLES APPEAR, SWITCH OFF THE GAS SUPPLY AND REPAIR THE PROBLEM. PERFORM A NEW LEAK TEST. DO NOT USE THE BBQ BEFORE YOU ARE SURE THAT THERE ARE NO LEAKS.
- 8 IF THERE ARE STILL GAS LEAKS AFTER REPEATED ATTEMPTS, CONTACT YOUR DEALER.

 **WARNING!**
NEVER USE AN OPEN FLAME TO PERFORM A GAS LEAK TEST

CONNECTING GAS

- ★ Connect the gas hose to the gas rail inlet on the left hand side of the barbecue. Do not overtighten.
- ★ Do not use any sealing tape, paste or liquid on the connection.
- ★ Connect the regulator to the gas bottle according to your regulator and bottle dealer's instructions.
- ★ Gas hoses used for this product must not exceed 150 cm in length
- ★ Confirm all barbecue control knobs are in the OFF position.
- ★ We recommend propane gas for use in the Nordic Region, but butane can also be used. Butane is not very suitable for low temperatures.
- ★ Fit the regulator and the hose. Follow the assembly instructions supplied with the regulator set
- ★ Check the gas hose regularly for cracks, damage and decay. Never use a damaged gas hose.
- ★ Check that the movable plastic collar on the regulator is intact and that it has not been damaged by hot BBQ parts.
- ★ Check that the gas bottle stands on a firm, flat surface and is lower than the connector.
- ★ Use an approved gas bottle that fits the regulator supplied.

Regulator and gas hose

HOSE

- ★ Connect the gas hose to the gas rail inlet on the left hand side of the barbecue. Do not overtighten.
- ★ Do not use any sealing tape, paste or liquid on the connection.
- ★ Connect the regulator to the gas bottle according to your regulator and bottle dealer's instructions.
- ★ Gas hoses used for this product must not exceed 120 cm in length
- ★ Check the gas hose regularly for cracks, damage and decay. Never use a damaged gas hose.
- ★ Check that the movable plastic collar on the regulator is intact and that it has not been damaged by hot BBQ parts.
- ★ Check that the gas bottle stands on a firm, flat surface and is lower than the connector.
- ★ Use an approved gas bottle that fits the regulator supplied. Bottles of 10 kg or above are recommended.

REGULATOR

- ★ Confirm all barbecue control knobs are in the OFF position.
- ★ We recommend propane gas for use in the Nordic Region, but butane can also be used. Butane is not very suitable for low temperatures.
- ★ Fit the regulator and the hose.
Follow the assembly instructions supplied with the regulator set.

WARNING

NEVER STORE THE GAS BOTTLE UNDER THE BBQ WHEN IN USE. IF THE GAS BOTTLE IS BEING STORED UNDER THE BBQ WHEN NOT IN USE, DISCONNECT THE REGULATOR.

NEVER MOVE THE BBQ WHILE IT IS IN USE, OR CONNECTED TO THE GAS BOTTLE.

Final Check

LOCATION

- ◆ Ensure that the BBQ is placed at least 150cm in all directions from house walls, trees, plants and other flammable materials or liquids when in use.
- ◆ Do not place the BBQ under a roof or overhang
- ◆ Ensure the BBQ is placed where there is plenty of ventilation.
- ◆ Do not BBQ below normal ground level.



FINAL CHECK

- ◆ Check that the control knobs work normally.
- ◆ Check that the gas hose is free of cracks and damage (it should always be done before using the BBQ)
- ◆ Check that the gas bottle and hose do not come into contact with hot objects.

GOOD ADVICE

- ★ **A CLEAN BBQ WORKS BETTER**, causes less smoke and will last longer.
- ★ **PREHEAT THE BBQ** for 10 minutes at full power prior to placing food on the BBQ. This gives a better result, and cuts BBQing time.


Lighting Instruction

IGNITION

1. Open the lid (lid must always be open when igniting).
2. Check that all controls are in the "off" position. Open valve control on gas container.
3. Push and turn the knob anticlockwise to the "MAX" position. The burner will be ignited. If the burner fails to ignite, turn the burner off and repeat ignition after 5 minutes. To ignite remaining burners, turn the next burner knob to "MAX".
4. If ignition does NOT occur in 5 seconds, turn the knob to "OFF" position, and repeat step 3 up to 2 or 3 times.
5. If the burner does not ignite after step 4, turn off the gas and wait 5 minutes for any excess gas to dissipate, then either repeat step 3 and 4 or light with an external flame.
6. Adjust burner control to appropriate setting.

FLAME CHARACTERISTICS

Check for proper burner flame characteristics. Each burner is adjusted prior to shipment; however, variations in the local gas supply may take subtle necessary adjustments.

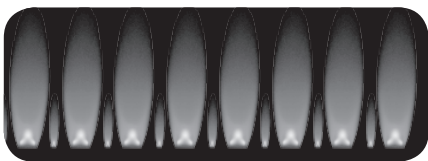

MANUAL IGNITION

You can light the burner manually if the ignition fails. Wearing a protective glove.

1. Read instructions before lighting.
2. Open the lid during lighting.
3. Simply place a match between the coils on the end of the matchstick holder, light the match and insert it into the hole of firebox to ignite.
4. Push and turn the knob to "MAX" position, and make sure the burner lights and stays lighted.
5. Repeat 3~4 to light other burners.



IF THE BBQ WILL NOT LIGHT USING NORMAL OR MANUAL LIGHTING, REFER TO THE TIPS SECTION IN THE TROUBLESHOOTING MANUAL, OR CONTACT YOUR DEALER.

WARNING

- ALWAYS KEEP AN EYE ON THE BBQ WHEN IN USE. NEVER ALLOW CHILDREN OR OTHERS WHO REQUIRE SUPERVISION NEAR THE BBQ WHEN IN USE.
- THIS BBQ IS ONLY INTENDED FOR OUTDOOR USE AND MUST NOT BE USED UNDER A ROOF. DO NOT USE UNDER NORMAL GROUND LEVEL. GAS CAN ACCUMULATE AND REPRESENT A DANGER OF EXPLOSION. GAS ACCUMULATION CAN ALSO CAUSE OXYGEN DEFICIENCY.
- THIS BBQ IS ONLY INTENDED FOR USE WITH GAS. NEVER USE LAVA STONES, BRIQUETTES, CHARCOAL, LIGHTING FLUID ETC.
- NEVER LIGHT THE BBQ WITH THE LID CLOSED.
- PERFORM THE LEAK TEST REGULARLY AND ALWAYS WHEN CHANGING THE GAS BOTTLE AFTER LONG STORAGE. ALWAYS CHECK THE GAS HOSE FOR DAMAGE AND CRACKS EACH TIME YOU USE THE BBQ.
- DISCONNECT THE GAS BOTTLE WHEN THE BBQ IS IN USE OR BEFORE MOVING IT.
- IF STORING THE BBQ IN A GARAGE OR BASEMENT BELOW GROUND LEVEL, DO NOT STORE THE GAS BOTTLE THE SAME PLACE, AS IT MUST BE STORED ABOVE NORMAL GROUND LEVEL.
- THE VENTS IN THE BBQ MUST NEVER BE SEALED OR BLOCKED.
- CHECK THAT THE VENTURI (VENTILATION) ON BURNERS AND SIDE BURNERS ARE NOT SEALED OR BLOCKED BEFORE USE.
- CLEAN THE BBQ REGULARLY AND THOROUGHLY.
- BE SURE THE BBQ IS COOL BEFORE YOU PUT ON THE BBQ COVER.

MAINTENANCE

- ★ Check that the burners are burning correctly regularly.
- ★ Remove the BBQ grate and flame guards.
- ★ Light the BBQ normally.
- ★ Turn the controls from low to high, check there is a difference in flame strength and that the flames are blue, not orange. If the burners act abnormally, refer to the troubleshooting chapter.
- ★ Remove any fat or deposits from previous use with a BBQ brush.

CLEANING

All cleaning and maintenance should be carried out when the appliance is cool and with the fuel supply turned OFF at the gas cylinder after each time use. DO NOT mistake brown or black accumulation of grease and smoke for paint. Interiors of gas BBQs are not painted at the factory (and should NEVER be painted). Apply a strong solution of detergent and water or use a BBQ cleaner with scrub brush on insides of BBQ lid and bottom. Rinse and allow to completely air dry. DO NOT apply a caustic BBQ / oven cleaner to painted surfaces. DO NOT use abrasive or flammable cleaners, as it will damage the parts of the product and may start a fire.

PLASTIC PARTS

Wash with warm soapy water and wipe dry.

BBQ BODY

Lack of maintenance / cleaning, can lead to the BBQ rust. To keep the barbecues beautiful and long lasting, it is recommended to use mild detergents and hot water. Wipe the surface with a non-abrasive wash cloth. Acid-free oil is recommended to avoid rust.

COOKING GRID AND FLAME TAMER

Use a mild soapy water solution. Non-abrasive scouring power can be used on stubborn stains, then rinse with water. Make sure the cooking grids are well dried before storage.

INSECTS AND VERMIN

After long-term storage, insects and other vermin can be found in the BBQ. If you experience problems with lighting or irregular flames, it can be due to unwanted guests blocking the gas supply. In such instances, dismantle and clean the burners. Replace the burners when they are dry.

- ★ Check that the gas hose is not damaged by mice or rats.

MAINTAIN THE BURNERS

1. Turn gas off at control knobs and LP Tank.
2. Remove cooking grates, grease tray and grease cup.
3. Remove screw at end of burner using a screwdriver.
4. Carefully lift each burner up and away from valve openings.
5. Wire brush entire outer surface of burner to remove food residue and dirt.
6. Clean any blocked ports with a stiff wire such as an open paper clip.
7. Check burner for damage, due to normal wear and corrosion some holes may become enlarged. If any large cracks or holes are found replace burner.
8. Carefully refit burners.
9. Replace flametamer and cooking grid.

Grease fire

Lack of maintenance may result in a grease fire because old fat and grease takes fire when it reaches high temperatures.

PREVENT GREASE FIRE

- Clean the BBQ regularly to avoid grease fires. Always, remove residues of grease and food after the BBQ has been used.

IN CASE OF GREASE FIRE

In case of grease fire, close the gas supply and disconnect the controller. Leave the lid open and wait until the fire goes off by itself.

NB!

FIRES CAUSED BY GREASE, WILL DAMAGE THE METAL, PAINT AND ENAMEL.

DAMAGE TO THE BBQ CAUSED BY GREASE FIRES, ARE NOT COVERED BY THE WARRANTY AS IT IS DUE TO INCORRECT USE.

NB!

**NEVER USE WATER TO EXTINGUISH A GREASE FIRE!
CLEAN THE BBQ REGULARLY TO AVOID GREASE FIRES.**

NB!

- YOUR BARBECUE IS NOT DESIGNED TO BE USED WITH MORE THAN 50% OF THE COOKING AREA AS A SOLID PLATE – THIS INCLUDES BAKING DISHES.
- FULL COVERAGE WILL CAUSE EXCESSIVE BUILD-UP OF HEAT AND DAMAGE THE BARBECUE. THIS IS NOT COVERED BY WARRANTY.

Recipe CHILI CRAB



SINGAPORE CHILI CRAB

King crab loins split in half
Chinese buns
Fresh coriander
Oil for deep frying, approx. 7 dl

Sauce:

Oil
2 finely chopped shallots
2 tbps finely chopped ginger
2 finely chopped garlic cloves
1/2-1 Chili
2 chopped tomatoes
1 can crushed tomatoes (400-500 g)
1 dl sweet chili sauce
1/2 dl soy sauce
Sriracha

Start with the sauce. Sauté shallots, ginger, chili and garlic with some cooking oil. Add chopped and canned tomatoes along with the sweet chili sauce. Let it simmer for 5 minutes. Add soy sauce and sriracha to taste.

Brush the crab loins with oil so it won't stick to the grill. Sprinkle some salt over it before placed on grill, meat side down. Deep fry the chinese buns until golden.

Add the crab to the sauce and sprinkle with some fresh coriander right before serving.

GET MORE FANTASTIC RECIPES:
[youtube.com/flyingculinaryTV](https://www.youtube.com/flyingculinaryTV)



Our story

In 2005 four talented young chefs left for New York, asked to cook at an event in Central Park. They enjoyed working together and the guests really appreciated the food. One of the guests was so enthusiastic he booked the four chefs for another event in Los Angeles.

The idea of “The Flying Culinary Circus” was created.

Fast forward – The chefs have now travelled to more than 56 countries all over the world. Royalties as well as celebrities have enjoyed the culinary concept the chefs offer tremendously. But, as the chefs say “it’s not about how famous our guests are, it is all about sharing the fun of cooking».

Trouble Shooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
BURNER WILL NOT LIGHT	GAS BOTTLE IS EMPTY	REPLACE GAS BOTTLE
	DAMAGED REGULATOR	CHECK/REPLACE THE REGULATOR
	BURNER IS BLOCKED	CLEAN THE BURNER
	GAS SUPPLY IS BLOCKED	CLEAN GAS VENTURY OR HOSE
	ELECTRODE IS BROKEN OR DIRTY	CLEAN THE ELECTRODE
	IGNITION KNOB IS BROKEN	CONTACT YOUR DEALER
	WINDY CONDITIONS	PLACE THE BBQ IN A LESS EXPOSED POSITION.
	IGNITION WIRE IS DAMAGED OR FITTED INCORRECTLY	MAKE SURE WIRE IS MOUNTED CORRECT
	BATTERY IN IGNITOR BOX IS EMPTY	CHANGE BATTERIES
LOW FLAME	EMPTY GAS BOTTLE	REPLACE GAS BOTTLE
	IRREGULAR GAS SUPPLY	CHECK/REPLACE THE REGULATOR
	THE BURNER IS BLOCKED	CLEAN THE BURNER
	GAS SUPPLY OR HOSE IS BLOCKED	CLEAN GAS VENTURY OR HOSE
LOW FLAME OR BACKFIRE	GAS BOTTLE IS TOO SMALL	13 KG OR LARGER BOTTLE IS RECOMMENDED
	BURNER IS BLOCKED	CLEAN THE BURNER
	GAS SUPPLY OR HOSE IS BLOCKED	CLEAN GAS VENTURY OR HOSE
	WINDY CONDITIONS	PLACE THE BBQ IN A LESS EXPOSED POSITION
TROUBLE TURNING THE KNOBS	GAS VALVE JAMMED	REPLACE GAS VALVE. NB! KNOBS SHOULD BE PRESSED IN AND TURNED
HEAVY SMOKE	FATTY FOODS ON THE BBQ	TRIM AWAY EXCESS FAT FROM MEAT. CLEAN THE FAT TRAY.

Consumer contact

This product is covered by a warranty in accordance with consumer legislation. It has undergone strict quality controls and testing at the factory.

If there are any parts missing or the product has been damaged, please contact your dealer or the consumer contact below for help.

Faults due to misuse, lack of maintenance or modification of the product will invalidate the warranty. Damaged parts not due to a fault with the product will be invoiced according to our price list + carriage and administration fee.

If new parts are needed or in the event of a warranty claim, please contact your dealer or consumer contact:

FCC PRODUCTS AS
KJELLER VEST 3, 2007 KJELLER, NORWAY

+47 924 78 600
✉ support@fccproducts.no
www.fccproducts.no

Always attach your receipt and product serial number when making a warranty claim.
Serial number is located on the side of the BBQ.

Produced in China for FCC Products Co., Ltd.

We are always looking for ways we can improve our products. Therefore, we reserve the right to change technical specifications at any time. You will always find the latest manual on www.fccproducts.no.