

FCC BBQ

by The Flying Culinary Circus



MANUAL

Table Top Electric BBQ



ENGLISH

FCC BBQ TABLE TOP Electric BBQ

Model: FCC-EG-211000 / FH-1804G

**FOR YOUR OWN SAFETY:
READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCES!**


ELECTRIC PARAMETER

Rated Voltage: 220-240V
Rated Frequency: 50/60Hz
Rated Power: 2000W



FCC BBQ TABLE TOP

Location of Parts and Control

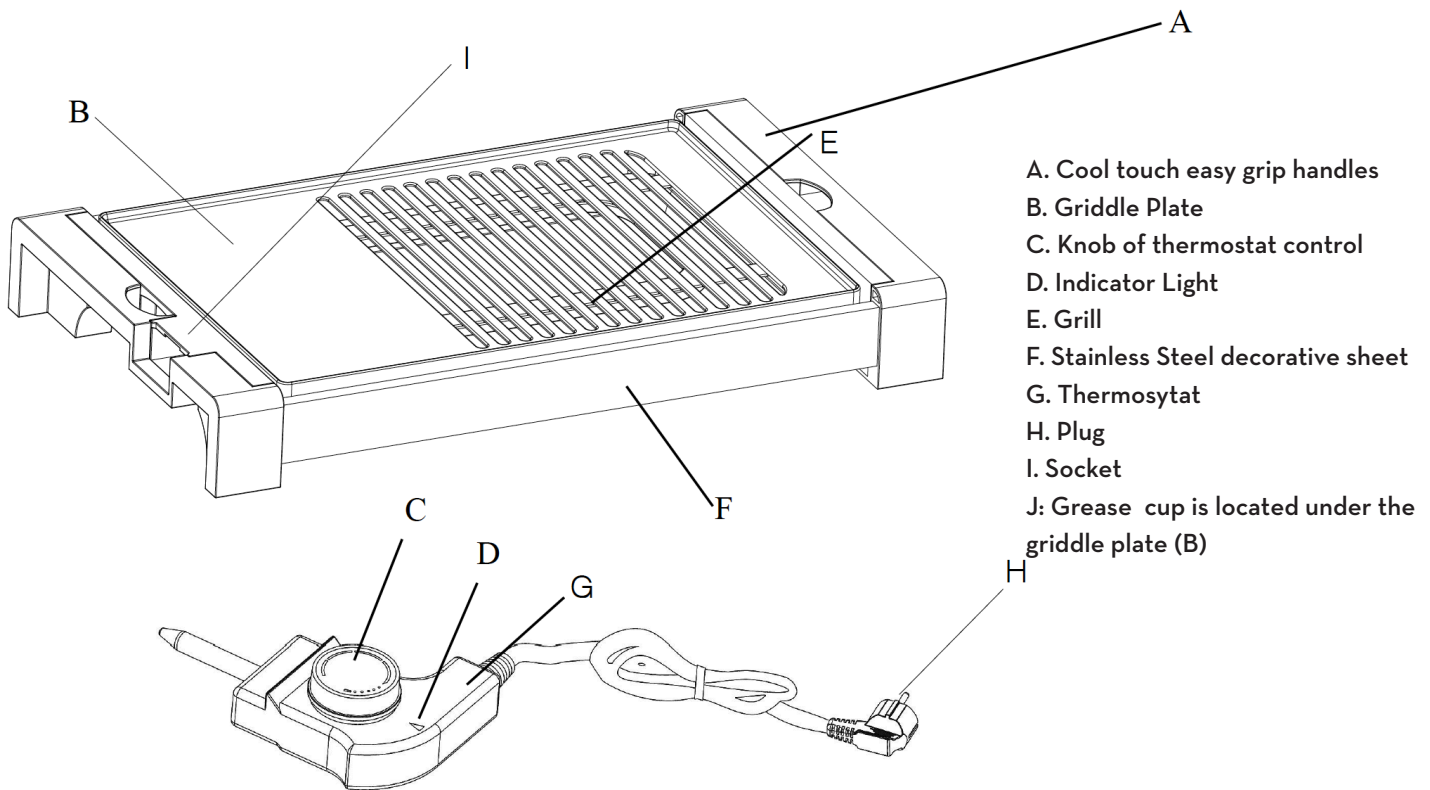

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. If the supply cord is damaged, it must be replaced by the manufacturer or its authorized service agent or a similarly qualified person in order to avoid hazard & damage to the unit.
2. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
3. The appliance can not be partially or fully immersed in water for cleaning.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or learning disabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. Keep the appliance and its cord out of reach of children.
7. This appliance may only be connected to the same main voltage as shown on the rating plate.
8. To protect against risk of electrical shock, do not immerse or rinse housing, cord or plug in water or other liquid.
9. Close supervision is necessary when any appliance is used near children.
10. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
11. Do not contact any moving parts while the appliance is operating.
12. The use of attachment or accessories which are not supplied with the appliance are not recommended. This could result in electrical shock or injury or permanent damage to the appliance.
13. Do not let cord hang over edge of table or counter or touch hot surface.

FCC BBQ TABLE TOP

Location of Parts and Control

14. Do not use the appliance for other than intended household use.
15. Switch off the appliance before changing accessories or approaching parts, which move in use.
16. This appliance is for household use and may be plugged into any AC electrical outlet (ordinary household current). Do not use any other electrical outlet.
17. Do not touch hot surfaces. Use handles.
18. An insulated hot pad protection is recommended when using this grill on surfaces which heat may cause damage.
19. The temperature of accessible surfaces may be high when the appliance is operating.
20. Only the appropriate connector supplied by the manufacturer must be used.
21. The appliance can only be used for household indoor only.
22. Connector must be removed before the appliance is cleaned and that the appliance inlet must be dried before the appliance is used again.
23. Only the appropriate connector must be used.

CAUTION!

The housing gets hot when operation, Risk of burns!

Do not place the appliance on a sensitive surface (e.g. painted furniture) and keep a distance of at least 70cm from combustible materials (e.g. curtains).

IN USE

- Never put the appliance on a hob.
 - When the appliance is switched on the light will illuminate and extinguish as the thermostat switches the heating element on and off to maintain the required temperature.
 - A little hot fat can splash from the appliance when the thermostat is set to higher than 165 degrees Celsius.
 - Never allow metal cutlery to contact the grill plate, since this could damage the non-stick coating.
 - Do not touch the hot grill plate. Use oven gloves if you need to touch the appliance during or shortly after use.
 - Do not use an aluminum form/aluminium foil on top of the grill plate. This can lead to overheating and destroy the non-stick coating.
 - Do not use frying pans or pots on the grill plate. This can lead to overheating and destroy the non-stick coating.
1. Place the appliance on a flat, stable and heat-resistant surface; keep inflammable items away from the appliance.
 2. Smear a little of butter or cooking oil on the grill plate. This makes it easier to turn the food over.
 3. Plug the thermostat into the thermostat socket.
 4. Put the plug into an earthed wall socket.
 5. Adjust the thermostat dial to your desired setting, the temperature light illuminates.
 6. Wait for several minutes until the temperature light has extinguished. The grill plate has now reached the required temperature. It is ready for use.
 7. Use the spatula to turn the food over during frying and grilling.

FCC BBQ TABLE TOP

Cooking chart & cleaning

GRILL COOKING CHART: THIS COOKING CHART IS FOR REFERENCE ONLY.

Control No.	1	2	3	4	5
Temperature	110 °C	130 °C	160 °C	180 °C	210 °C

FOOD	TEMPERATURE	APPROX. TIME
Beef steaks 1-1,5 cm thick	210 °C	10-15 minutes
Chicken breasts	210 °C	20-30 minutes
Pork chops	160 °C	15-20 minutes
Hamburgers	180 °C	10-15 minutes
Hot dogs	160 °C	10-15 minutes
Sausages	180 °C	5-10 minutes
Fish filets	160 °C	10-15 minutes
Bacon	160 °C	10-12 minutes
Vegetables	160 °C	10-15 minutes
Pancakes	160 °C	5-10 minutes

CLEANING INSTRUCTIONS

1. Disconnect the plug from wall outlet, and then remove the power cord connector together with power cord from the appliance.
2. Allows the unit to completely cool.
3. Wipe off the grill pan with warm soapy water using a sponge or dishcloth.
4. Wipe off thoroughly to remove soap residue.
5. Always unplug the grill and allow it to cool before starting to clean.
6. Do not use abrasive cleaners or scouring pads.
7. Do not put temperature control or power cord in the dishwasher.
8. Never immerse the cord, plug or temperature selector in any liquid.
9. Do not soak the grill in water.
10. The connector must be removed before the appliance is cleaned and that the appliance inlet must be dried before the appliance is used again.

gridd

FCC BBQ TABLE TOP

Guarantee & Contact

This product is covered by a warranty in accordance with consumer legislation. It has undergone strict quality controls and testing at the factory. If there are any parts missing or the product has been damaged, please contact your dealer or the consumer contact below for help.

In the event of damage to the product, we ask for pictures of the damage and damage to the product's packaging is attached to the complaint.

Faults due to misuse, lack of maintenance or modification of the product will invalidate the warranty. Damaged parts not due to a fault with the product will be invoiced according to our price list + carriage and administration fee.

If new parts are needed or in the event of a warranty claim, please contact your dealer or consumer contact:

FCC PRODUCTS AS

KJELLER VEST 3, 2007 KJELLER, NORWAY

+47 924 78 600 / +46 031 189095

Support opening hours: Mon-Fri 10:00-14:00

✉ support@fccbbq.com

FCCBBQ.NO

FCCBBQ.SE

FCCBBQ.COM

Always attach your receipt and product serial number when making a warranty claim. Serial number is located on the side of the BBQ.

Produced in China for FCC Products



Do not dispose of this product with normal household waste. Make sure that worn or damaged electrical equipment cannot be reused. Take it to your dealer or an approved collection point for recycling of electrical and electronic waste.

By recycling used electrical and electronic equipment, you are doing important environmental work. If necessary, ask your local authorities where you can dispose of the product.

We are always looking for ways we can improve our products. Therefore, we reserve the right to change technical specifications at any time. You will always find the latest manual on www.fccbbq.com