
FCCC BBQ

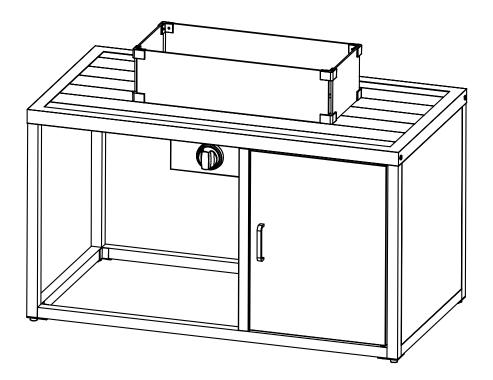

TERRAZZA - GAS FIRE PIT TABLE

ALUMINUM

FCC-PB-10001

ASSEMBLY & MAINTENANCE

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

WHO ARE WE?

The Flying Culinary Circus is the world's first traveling cooking group. In 2005 Trond, Hans-Kristian, Mathias, and Tor, went to New York. A journey that ended up being an adventure of a lifetime. With 65 countries and 300,000 hours of culinary experience in the Chef whites, we have developed, designed, and produced a wide range of grills and accessories that add something new and unique to the grill range in the Nordic region.




Hans-Kristian, Mathias, Trond and Tor.

Something we have always had is great love for grilling and barbeque as a cooking method. Whether we have a garden party, enjoy summer evenings in the park, cater for famous guests on the French Riviera or simply just go on a cabin trip, barbecue and grilling is in the center. It's fantastic flavors, it's tough, it's cool and it's love for the most amazing cooking method in the world! 2024 will be the seventh year for FCC BBQ, and we're very proud and humble for the success and what we as a company have achieved. For all of FCC BBQ products, the common denominator is high quality and functionality at a good price. We want to inspire the world trough cooking. Just as our vision: Share the fun of cooking!

Weight incl. lava stone: 18.6 kg Total Heat input: 10.3kW Gas consumption: 748 gram/hour

Gas cylinder (not included): Use standard cylinder approved for use in the Nordic Region, 5 kg bottle is recommended. Even though butane and propane gas can be used, we recommend propane for use in the Nordic Region. Approved hoses and regulators are available from most outlets selling gas equipment.

NB! Gas hoses used for this product must not exceed 120 cm in length.

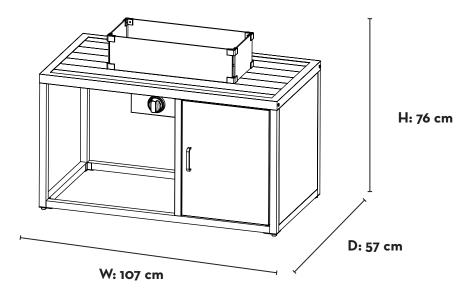




DESTINATION OF COUNTRIES TO USE	VALVE SIZE	GAS TYPE	GAS CATEGORY
AL, CY, CZ, DK, EE, FI, FR, HU, IT, LT, NL, NO, RO, SE, SI, SK, HR, TR, BG, IS, LU, MT, MK, GB, GR, LV, IS	Ø 1.58 mm	G3O(Butane G31 Propane) and their mixtures	I3B/P(30)

CE 2575-23

Г

The product is manufactured in accordance with European Gas Appliances Regulation (EU) 2016/426

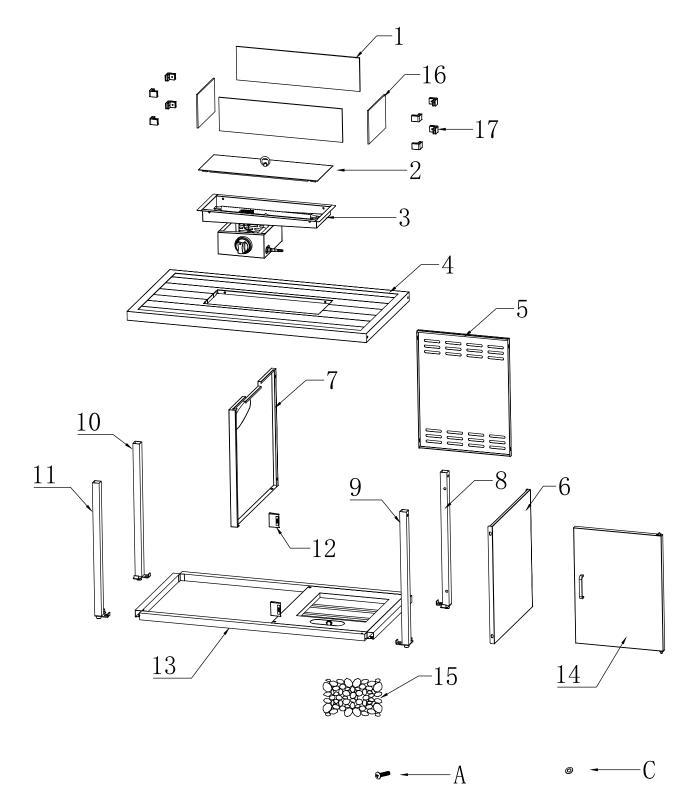



Code	Description	Qty
1	Glass Longside	2
2	Lid	1
3	Fire Bowl System	1
4	Table Top	1
5	Back Panel	1
6	Right side Panel	1
7	Left side Panel	1
8	Right leg, back	1
9	Right leg, front	1
10	Left leg, back	1
11	Left leg, front	1
12	Door Magnet	2
13	Bottom Panel	1
14	Door	1
15	Lava stone	1 pcs
16	Glass Shortside	2
17	Glass fixation Sheet	8

FIXING MATERIAL

Code	Description	Qty
А	M6x15 screw	23
В	M4x12 screw	8
С	M8 washer	8
D	Screwdriver	1

We recommend assembling the gas fire pit on a flat surface. **Insert all screws first, do not tighten. Tighten all screws when item is fully assembled.**

WARNING!


DO NOT USE ELECTRICAL TOOLS TO ASSEMBLE THE GAS FIRE PIT. TOOLS WITH EXCESSIVE FORCE MAY DAMAGE THE SURFACE COATING OF SCREWS, DAMAGE ENAMEL/PAINTED PARTS OF THE MODULES, AND LOOSEN PRE-FITTED NUTS.

TIP!

If the gas fire pit appears crooked or bowed after fully assembled, loosen all the screws. Straighten each part and tighten screws again. The gas fire pit should be placed and mounted on a level surface for the best possible result.


Attach the legs, parts 8, 9, 10 and 11, to the bottom panel, part 13, with 8 pcs C washers and 8 pcs A screws.

PLACE A PIECE OF CARDBOARD ON THE FLOOR (E.G THE OUTER CARTON) TO PREVENT SCRATCHING THE UNIT AND PARTS DURING ASSEMBLY.

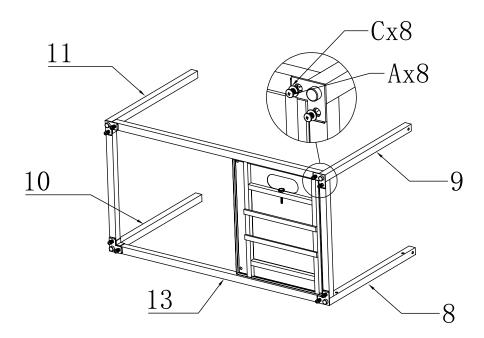





Mount the right side panel part 6 with 4 A screws.

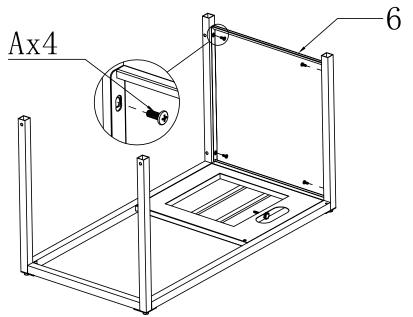

STEP 3 Mount part 5 back panel with 2 A screws.

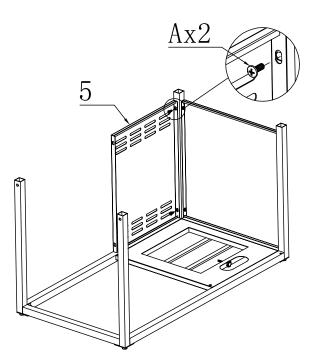


STEP 4 Mount part 7 left side panel with 4 A screws.

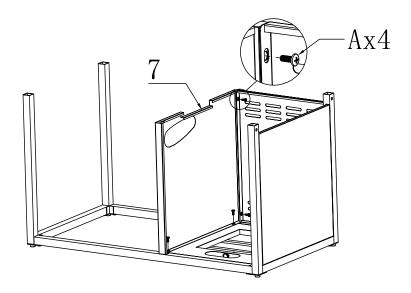


7

Mount part 4 table top with 5 A screws. **Tip!** Insert all screws before tightening.

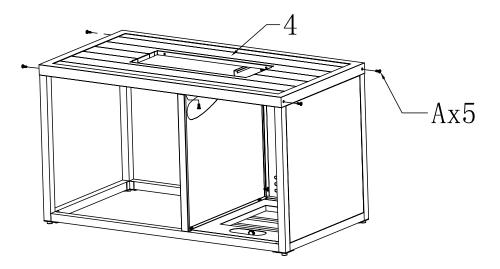


STEP 6 Fit two of the part 12 door magnets with 4 B screws.

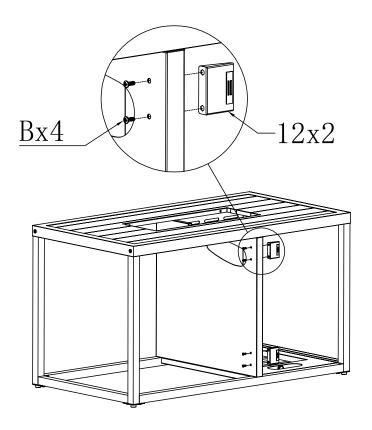


Install the fire box system part 3.

Tilt the fire box up as shown in the drawing.

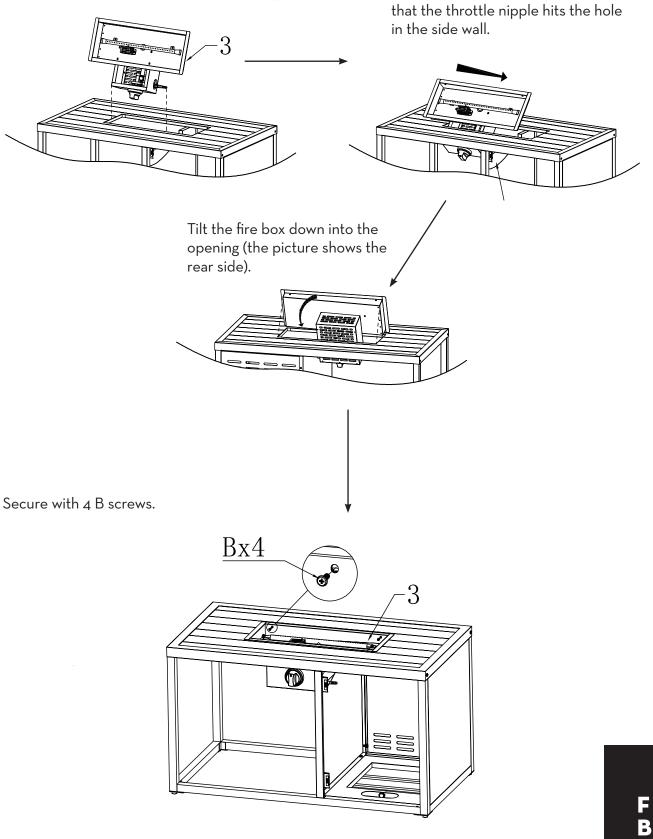


Thread the fire box in rightside so

Loosen the pre-installed screws for the door handle and fit the handle to the door.

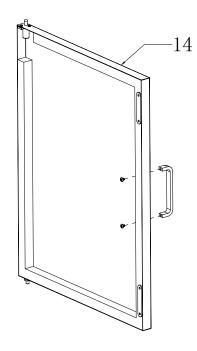


STEP 9


Place the door, part 14, at the bottom first and press down the pin at the top and gently push the door into place.

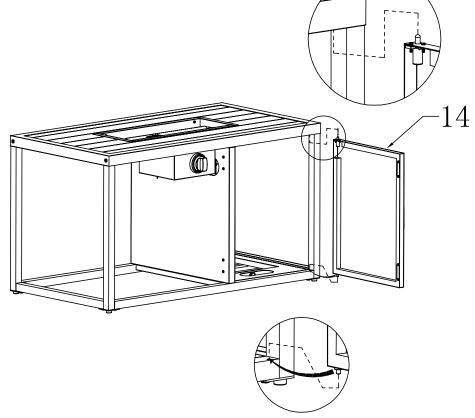


STEP 10 Place the lava stones, part 15, and put on part 2, lid.

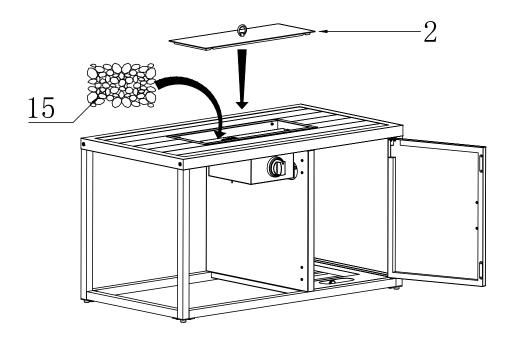


Fit part 1, glass long side, with part 16 glass short side, with 8 pcs brackets, part 17. **Tip!** Mount the glass brackets to part 17 before you mount part 16. Then you can tighten all the screws the easiest way. **ATTENTION! Do not tighten the screws too hard - the glass may break.**

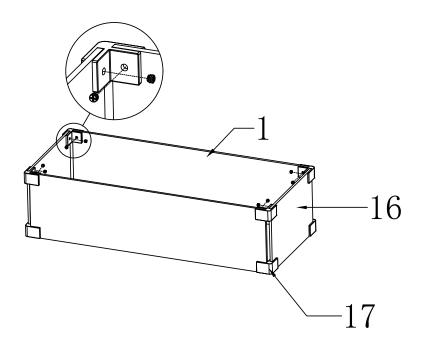

STEP 12 Place the glass on the table top.

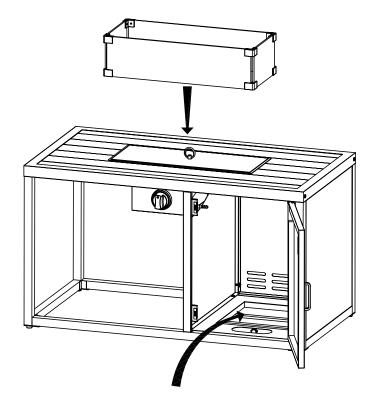


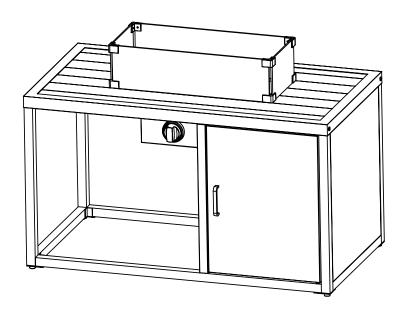

- ACCESSIBLE PARTS OF THE GAS FIRE PIT BECOME VERY HOT DURING USE. KEEP CHILDREN AND OTHERS WHO NEED SUPERVISION AT A SAFE DISTANCE.
- THE GAS FIRE PIT IS INTENDED FOR OUTDOOR USE ONLY IN WELL-VENTILATED AREAS.
- LEAK TESTS (PAGE 15) MUST ALWAYS BE CARRIED OUT BEFORE USING THE GAS FIRE PIT AND WHEN REPLACING THE GAS CYLINDER. ALSO PERFORM A LEAK TEST IF THE PRODUCT HAS NOT BEEN IN USE FOR A LONG TIME AND IN ADVANCE OF A NEW SEASON. ALWAYS CHECK THE GAS HOSE FOR DAMAGE AND CRACKS BEFORE USING THE GAS FIRE PIT.
- THE GAS FIRE PIT SHOULD NOT BE USED IN HIGH WINDS.
- NEVER USE THE GAS FIRE PIT IN CLOSED ROOMS OR UNDER ROOFS, AS THIS MAY LEAD TO A LACK OF OXYGEN.
- FAILURE TO FOLLOW THE INSTRUCTIONS PROVIDED CAN IMPLY A RISK OF SERIOUS INJURY TO PERSONNEL AND FIXED INSTALLATIONS.
- REBUILDING/MODIFYING THE GIRE PIT TABLE CAN CAUSE DANGER AND WILL INVALIDATE THE WARRANTY.
- IN WINTER / IN CASE OF FROST, THE GLASS WIND SHIELD MUST BE STORED INDOOR AT ROOM
 TEMPERATURE TO AVOID FROSTBITE.
- ALWAYS SUPERVISE THE GAS FIRE PIT DURING USE AND KEEP SUITABLE EXTINGUISHING EQUIPMENT WITHIN REACH.
- THE GAS FIRE PIT SHOULD NOT BE OPERATED BY INTOXICATED PERSONS.
- THE GAS FIRE PIT MUST NOT BE USED IN PLACES THAT ARE BELOW NORMAL GROUND LEVEL.
 GAS CAN ACCUMULATE AND REPRESENT A DANGER OF EXPLOSION. GAS ACCUMULATION CAN
 ALSO CAUSE OXYGEN DEFICIENCY.
- THE GAS FIRE PIT SHOULD NOT BE USED TO PREPARE FOOD

PLACEMENT OF THE GAS FIRE PIT TABLE

- Ensure that the gas fire pit is placed at least 150 cm in all directions from house walls, trees, plants and other flammable materials or liquids when in use.
- Do not place the gas fire pit table under a roof or overhang.
- Make sure that the gas fire pit is placed in a wellventilated place to avoid carbon monoxide poisoning.
- The gas fire pit must not be used below normal ground level, as this can lead to an explosion hazard and a risk of lack of oxygen.

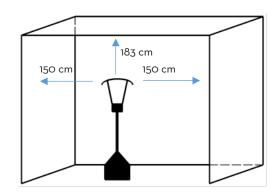


FOLLOW THESE INSTRUCTIONS CAREFULLY TO AVOID SERIOUS DAMAGE TO YOUR GAS FIRE PIT TABLE AND CAUSE PERSONAL INJURY.

HOSE

- Connect the gas hose to the gas inlet on the gas fire pit. Tighten well.
- Install the regulator and hose. Follow the installation instructions that came with the controller set.
- Do not use sealing tape, glue or liquid on the connection.
- Gas hoses used for this product must not be longer than 120 cm.
- Check the gas hose regularly for cracks, damage and rot. **Never use a damaged gas hose.**


REGULATOR

- Check that all controls on the control panel are in the OFF position before connecting the regulator to the gas cylinder.
- Connect the regulator to the gas cylinder according to your regulator and the cylinder dealer's instructions.
- We recommend propane gas for use in the Nordic countries, but butane can also be used. Butane is poorly suited for low temperatures.
- Check that the regulator is not damaged.
- Check that the gas cylinder is on a firm, level surface and is lower than the gas inlet on the gas fire pit.
- Use an approved gas cylinder that fits the regulator. Cylinders of 5 kg is recommended.

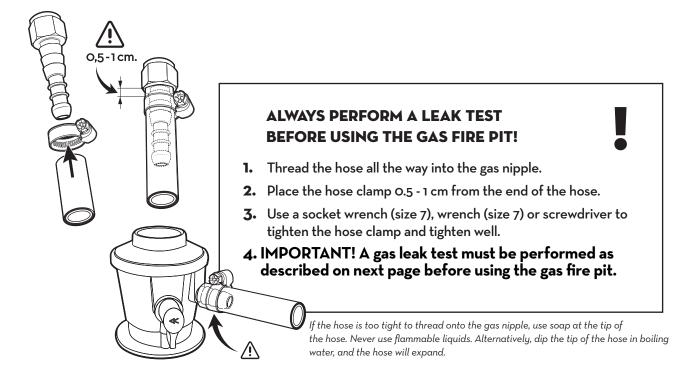

BEFORE USING THE GAS FIRE PIT, A LEAK TEST MUST BE CARRIED OUT!

NEVER CHECK FOR LEAKS BY USING AN OPEN FLAME! USE A LEAK SPRAY OR ALTERNATIVELY A SOAPY WATER MIXTURE (TWO PARTS DISHWASHING SOAP AND ONE PART WATER).

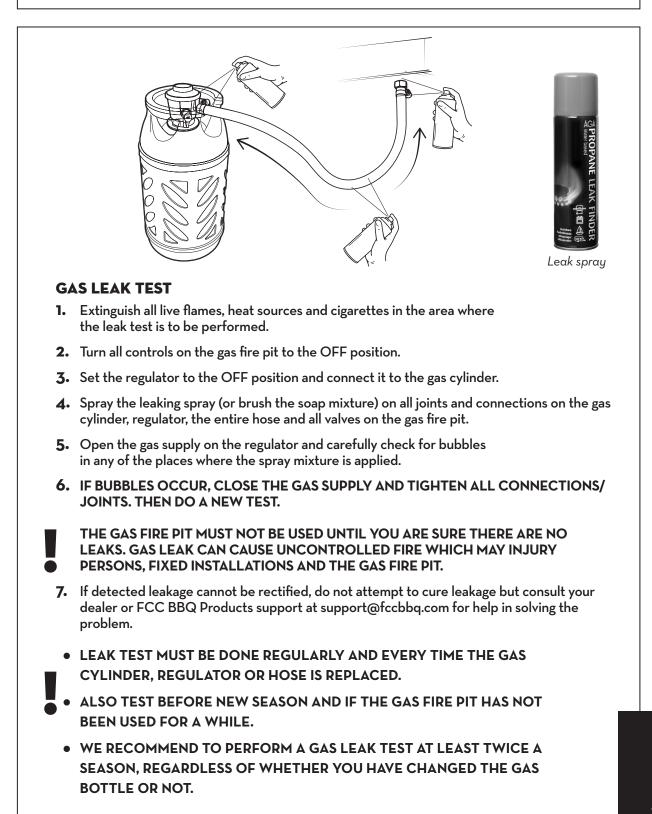

15

• THE GAS FIRE PIT IS INTENDED FOR OUTDOOR USE.

- If the gas fire pit is to be stored outdoors all year, then you must ensure that water is drained from the gas fire pit and that it is not left standing with water in the frame. This can cause frost damage and will not be covered by warranty.
- All metals can rust under the right conditions. Aluminum has an extremely high resistance, but regular cleaning and maintenance will increase its lifespan.
- Salts, sea air, bird droppings, paint scratches, and other strain may harm the finish over time. Clean regularly to prevent this from occurring.
- Note! The gas fire pit may have sharp edges. We have done our best to remove sharp edges during production, but we recommend to exercise caution when handling the product.
- THIS PRODUCT IS DESIGNED FOR USE IN DOMESTIC HOUSEHOLDS AND IS NOT INTENDED FOR COMMERCIAL USE IN RESTAURANTS OR SIMILAR VENUES
- The painted surface of the gas fire pit may be affected by sunlight. This does not affect the properties of the gas fire pit and is not covered by warranty. To prevent this, use a cover to protect.
- The painted surface of the gas fire pit can be worn/scratched during use. This must be fixed to
 prevent rust from forming in damaged surface areas.
- The gas fire pit must only be used for its intended purpose and must not be exposed to weight
 exceeding its maximum specification nor exposed to other loads/strain. DO NOT STAND OR JUMP
 ON THE GAS FIRE PIT AS THIS MAY DAMAGE THE PRODUCT.
- In the event the gas fire pit is overloaded, the joints and fittings may be damaged, affecting the furniture's strength and structure. This is not covered by warranty.
- Check for the presence of any damage before assembly. Please contact support@fccbbq.no for any inquiries.
- The surface of the gas fire pit may become very hot in direct sunlight. Please be aware of this and avoid use in high temperatures, as this may cause injury.
- The gas fire pit is intended for outdoor use.
- Do not use electrical tools to assemble the gas fire pit. Tools with excessive force may damage the surface coating of screws, damage enamel/painted parts of the grill, and loosen pre-fitted nuts.
- Inserting screws wrongly, torquing with excessive force, or using electrical tools may damage the threading. The aluminum frames can bend if you tighten the screws too hard. Damage as such will not be covered by the warranty.
- Keep children and others who require supervision at a safe distance away to prevent them from climbing on the gas fire pit. This may entail a risk of injury. Children must be supervised by adults when using the gas fire pit.
- Covers must not be applied before the gas fire pit is completely cool and dry. Moisture on the inside of covers may cause large formations of surface rust and damage to painted components.

MAINTENANCE OF ALUMINUM FURNITURE

Aluminum requires less maintenance, but it may corrode over time in damp and salty environments.

- Ensure regular cleaning with gentle soapy water and a soft brush or sponge. If the furniture is
 exposed to a lot of acid rain, pollution, bird droppings, and similar waste that can corrode the surface
 treatment and leave ugly stains. Clean the surface with clean water at the end to remove remaining
 soap.
- Please note that while aluminum can handle a lot, it can't take everything. It won't withstand being bent repeatedly, and corrosion may occur in the presence of salts, salt water, and other metal alloys. Aluminum is generally considered rust-free, but corrosion may occur if it is left exposed.
- If the furniture takes surface damage that removes the paint, we recommend using a paint repair pen or similar tool to prevent oxidization. Contact your nearest retailer.
- Use a garden hose for cleaning. The use of pressure washers is not recommended, as this may harm the furniture and its surface coating.

SHORT AND LONG-TERM STORAGE

- Clean the gas fire pit before storing and make sure provide it with extra protection. Use suitable cleaning products and wipe it down with a damp cloth.
- Make sure that the fire pit table is dry and not heated before storing under a furniture cover. If this is skipped, it may create a reaction with the cover, or leave stains or undesirable marks on the furniture. If there is moisture on the furniture, it may cause frost damage to the frame or joints. This may expand and damage the structure if ice forms. Ensure that there is no water in the frame before storage. If present, any water must be drained using the drainage holes.
- If you are storing the furniture in a cover during the winter, ensure proper ventilation.
- The furniture must be stored right side up to prevent water from entering the frame.
- Please note that damage caused by improper storage and/or frost damage will not be covered by warranty.
- If the furniture is to be stored outdoors all year, then you must ensure that water is drained from the furniture and not left standing with water in the frame. This can cause frost damage and will not be covered by warranty.
- IN CASE OF FROST, THE GLASS WIND SHIELD MUST BE STORED INDOOR AT ROOM TEMPERATURE TO AVOID FROSTBITE!

CLEANING

All cleaning and maintenance must be performed when the gas fire pit is cold. Make sure that the gas supply is switched OFF and the regulator is disconnected from the gas cylinder.

Use a mixture of dishwashing detergent and water, and a microfiber cloth. Do not use caustic soda, alcoholic or abrasive detergents. This can damage the gas fire pit and cause a fire.

LACQUERED PARTS AND PARTS IN GLASS

The gas fire pit is made of lacquered steel. Lack of maintenance/cleaning, can cause the material to rust. To keep the gas fireplace's beautiful design and surface, it is recommended to use mild non-abrasive cleaning agents and warm water. Dry the surface with a non-abrasive cloth. Lacquered surfaces are treated with car wax. The glass is made of tempered glass and can shatter upon impact/impact/pressure.

INSECTS AND VERMIN

After long-term storage, insects and other vermin can be found in the gas fire pit. If you experience problems with lighting or irregular flames, it can be due to unwanted guests blocking the gas supply. Dust/remains of lava stones in the burner or the spark plug can also occur. Remove lava stones and clean burner/ignitor.

FCC BBQ

WARRANTY CLAIM

This product is covered by a warranty in accordance with consumer legislation. It has undergone strict quality controls and testing at the factory. If there are any parts missing or the product has been damaged, please contact your dealer or the consumer contact below for help.

In the event of damage to the product, we ask for pictures of the damage and damage to the product's packaging is attached to the complaint.

Faults due to misuse, lack of maintenance or modification of the product will invalidate the warranty. Damaged parts not due to a fault with the product will be invoiced according to our price list + carriage and administration fee.

If new parts are needed or in the event of a warranty claim, please contact your dealer or consumer contact:

FCC PRODUCTS AS

KJELLER VEST 3, 2007 KJELLER, NORWAY

€ +47 924 78 600 Support opening hours: Mon-Fri 10:00-14:00 ▼ support@fccbbq.com

FCCBBQ.NO FCCBBQ.SE FCCBBQ.COM

Always attach your receipt when making a warranty claim.

PRODUCED IN CHINA FOR FCC PRODUCTS

We are always looking for ways we can improve our products. Therefore, we reserve the right to change technical specifications at any time. You will always find the latest manual on WWW.FCCBBQ.COM.